
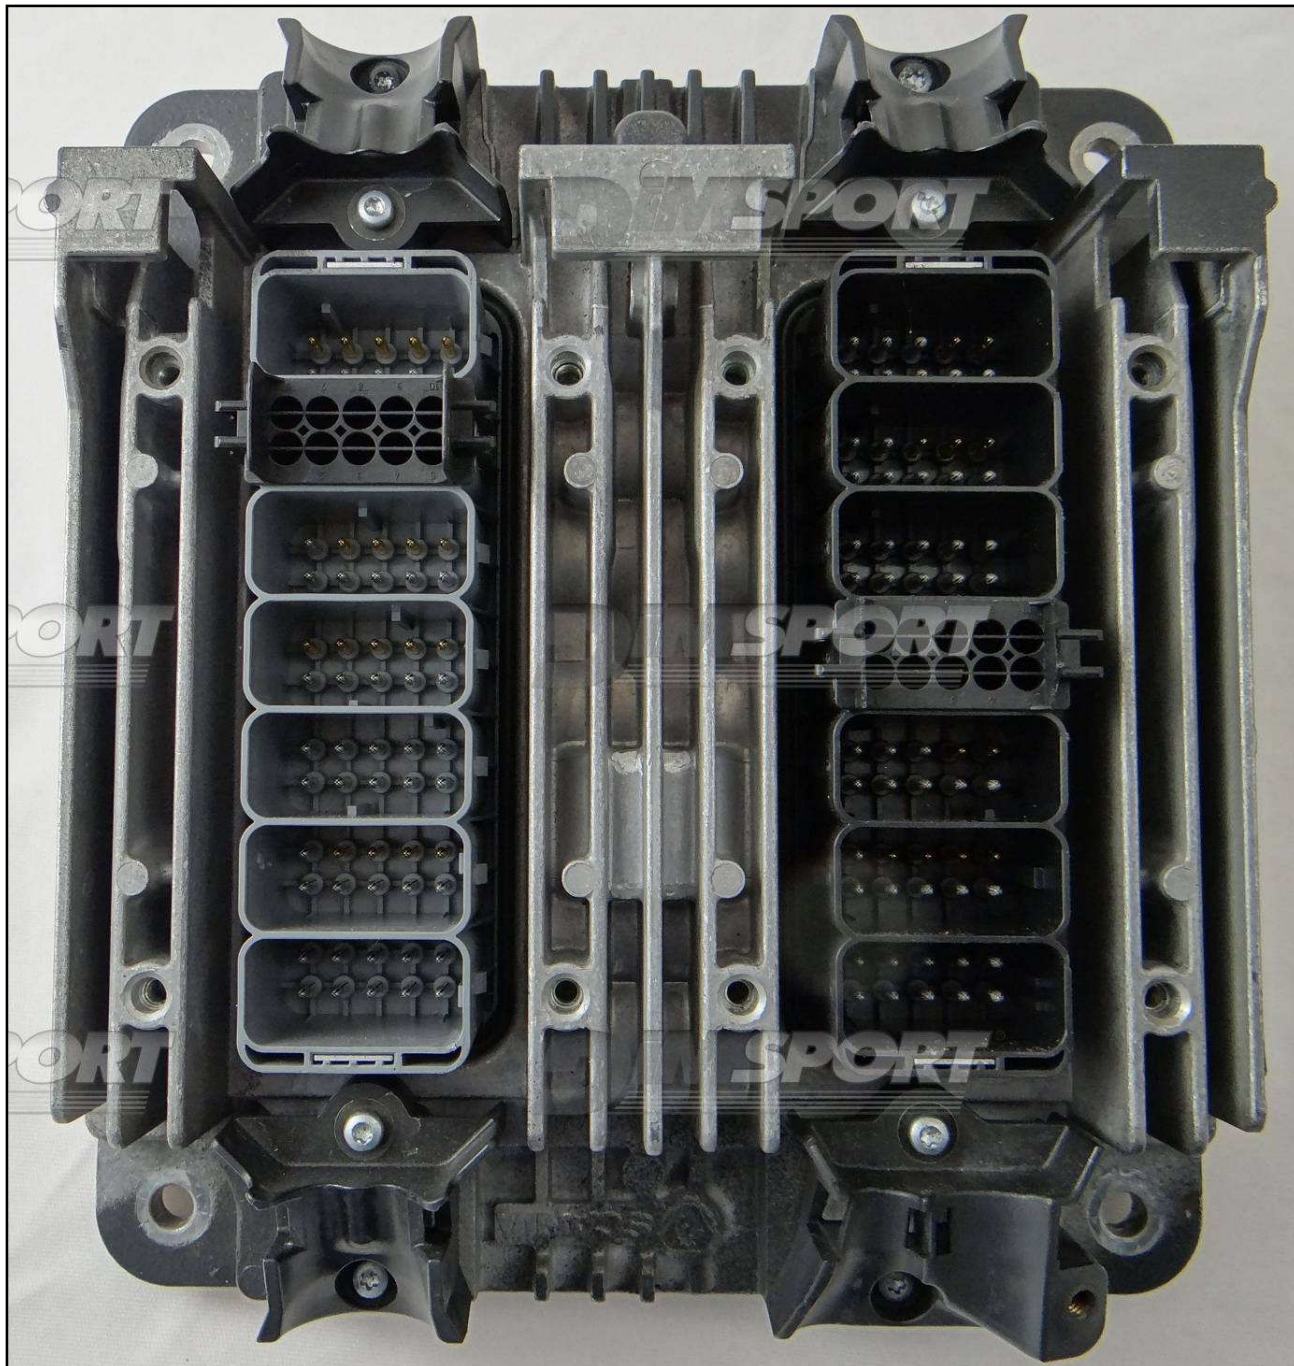



PLUGIN 594: NEW TRASDATA

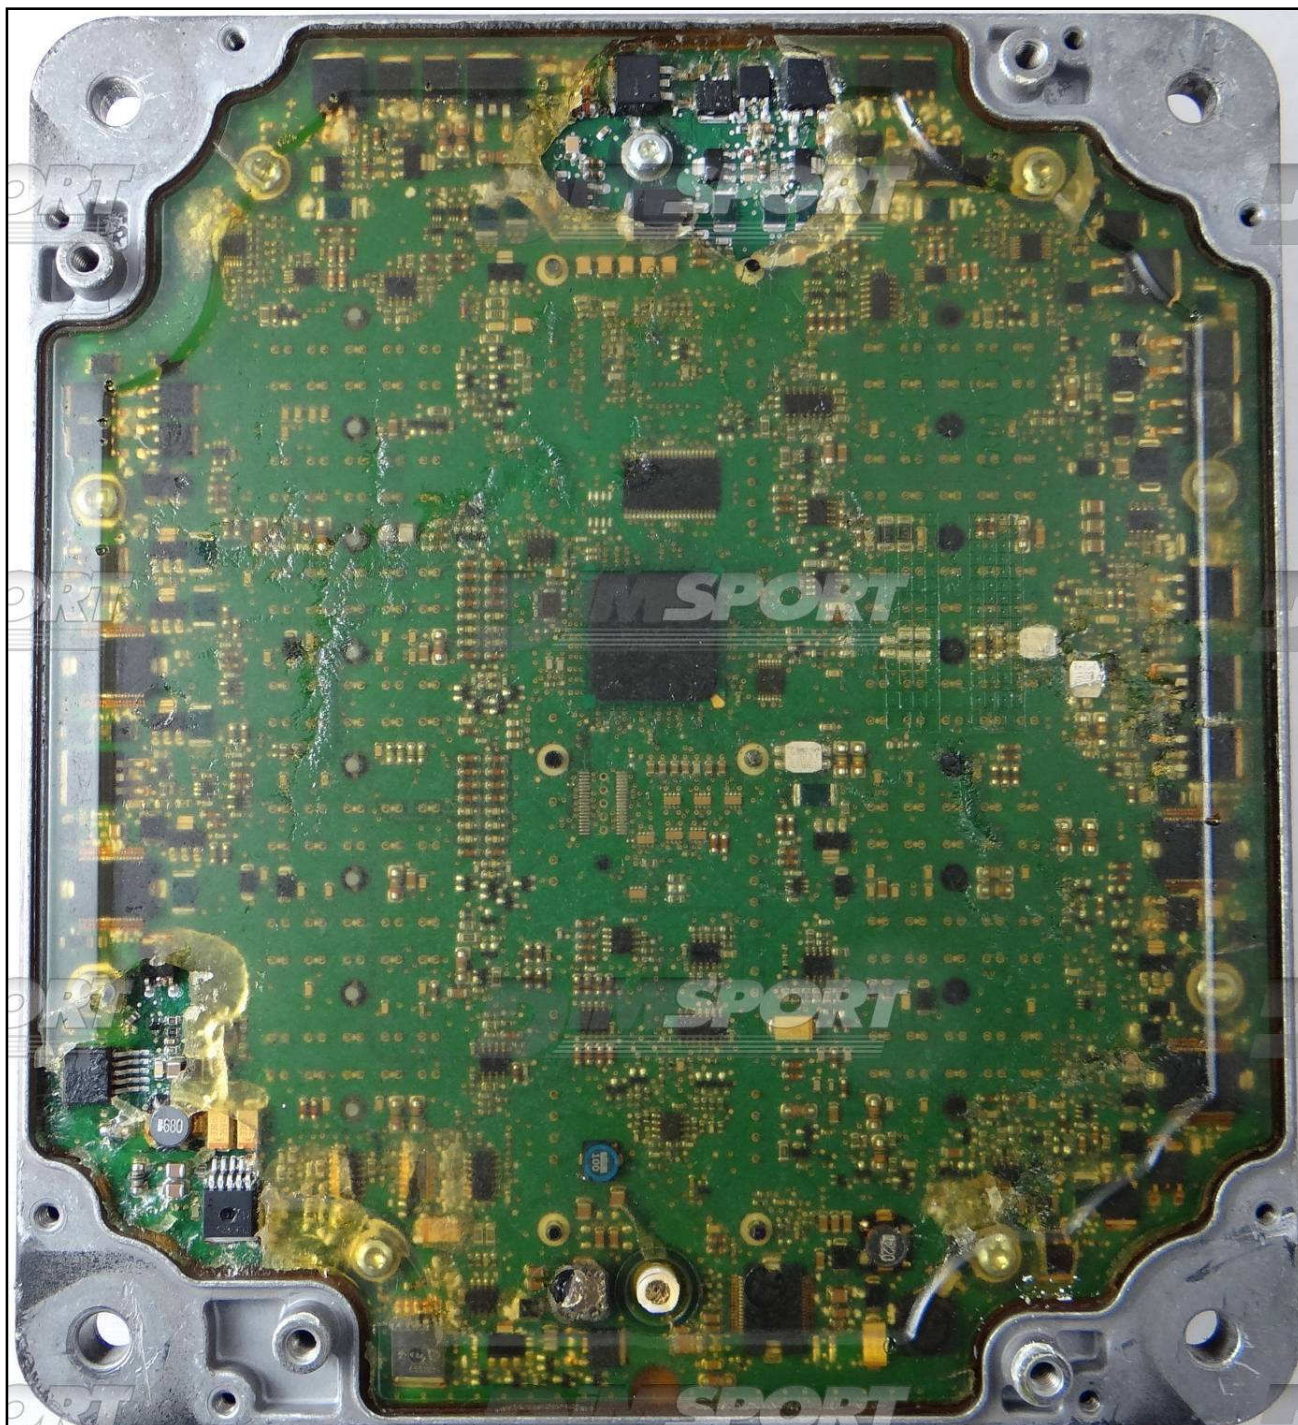

ECU CONNECTOR

In order to connect to the ECU use the CABLE F32GN037C.
Make sure that the POWER led (red) on NEW TRASDATA is ON.


COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

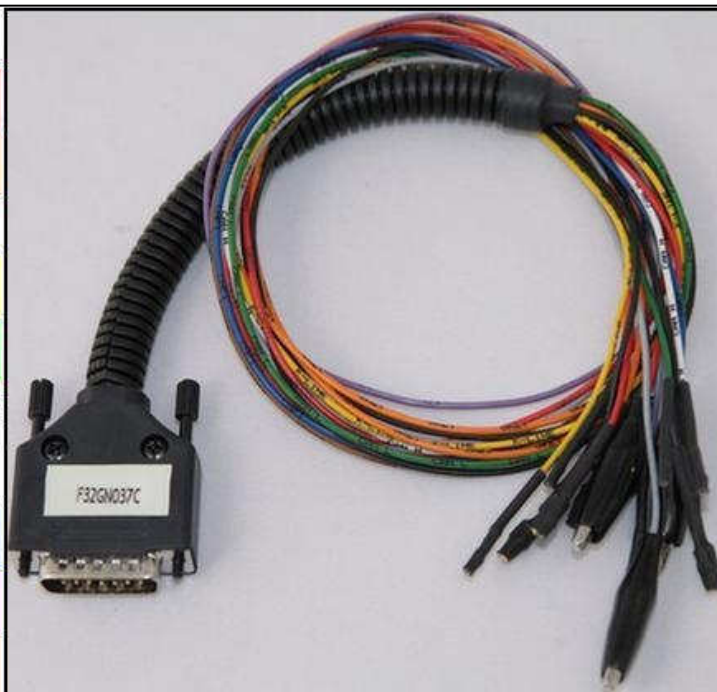

WARNING:



Due to the relevant power absorbed by the ECU at the beginning of the communication procedures it is necessary to feed the ECU with a booster or an additional battery. The ECU must be fed through the NEW TRASDATA, connect the F32GN003 power cable to the NEW TRASDATA.



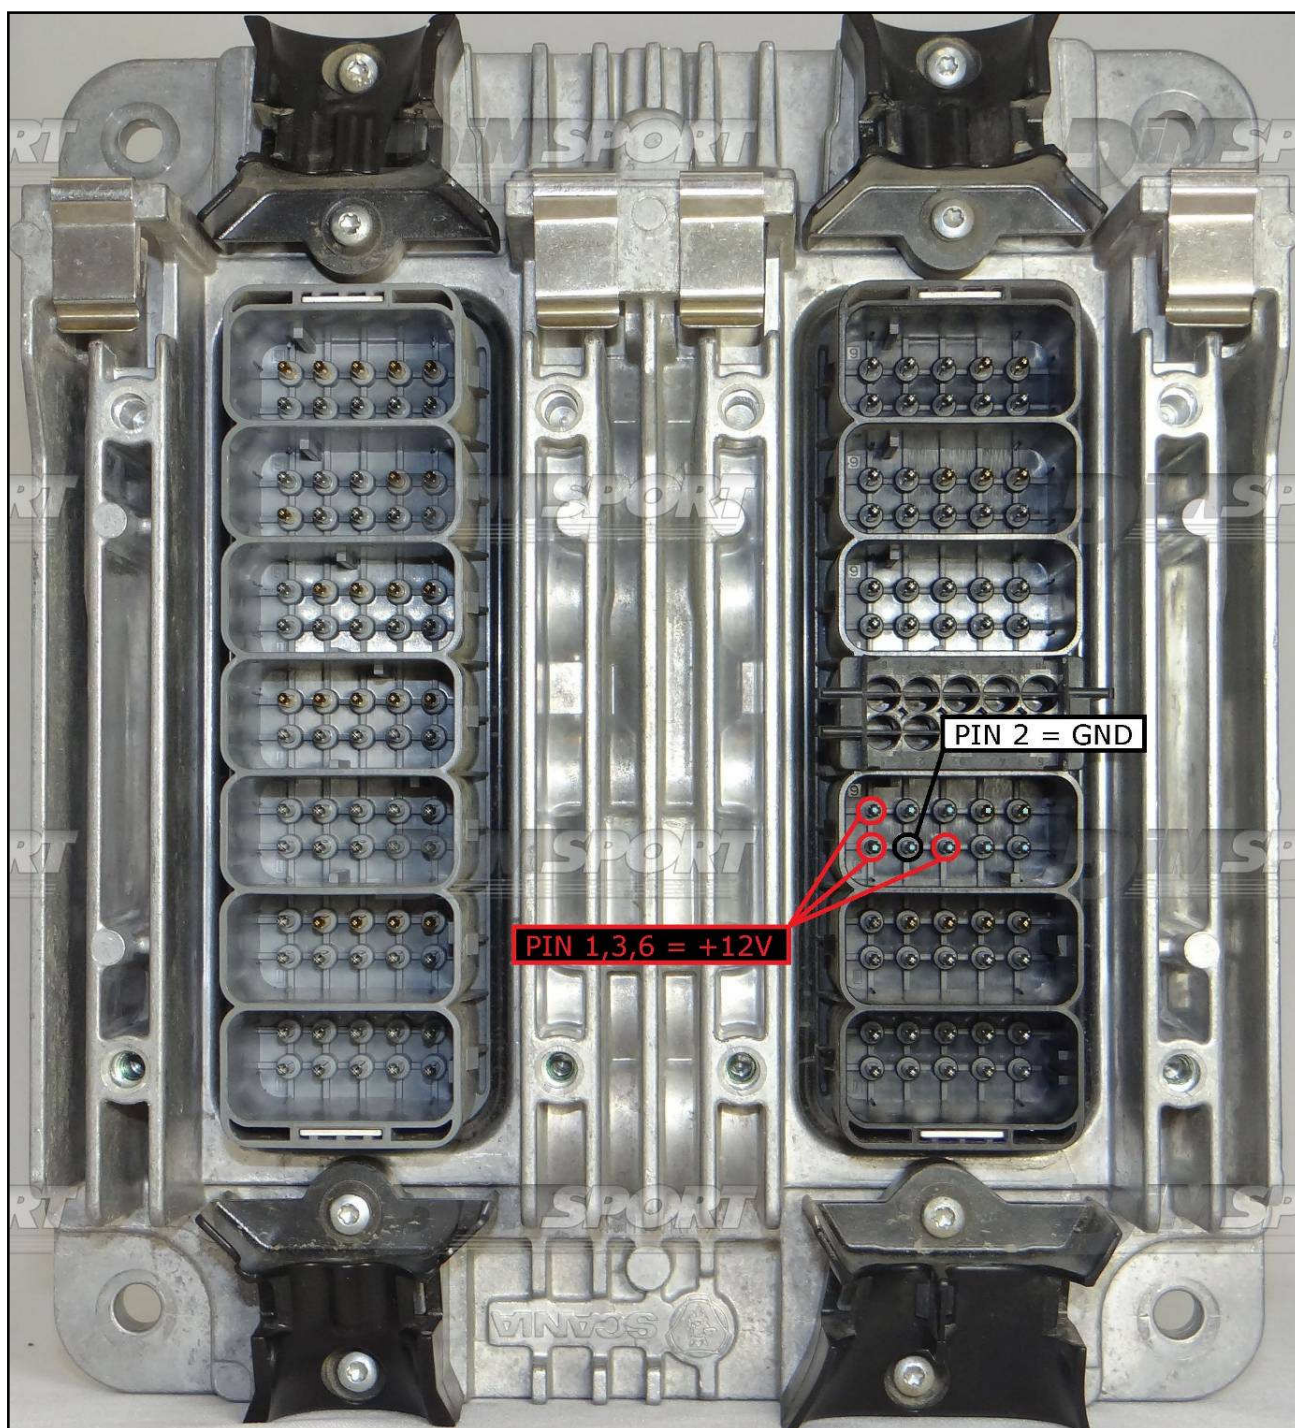


J-TAG LOOSE WIRE CONNECTION

Connect the flat cable F34NTF53 as shown here below

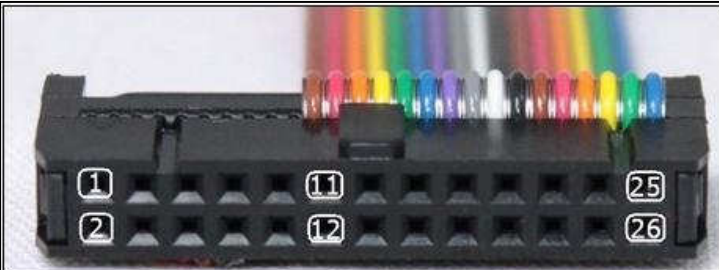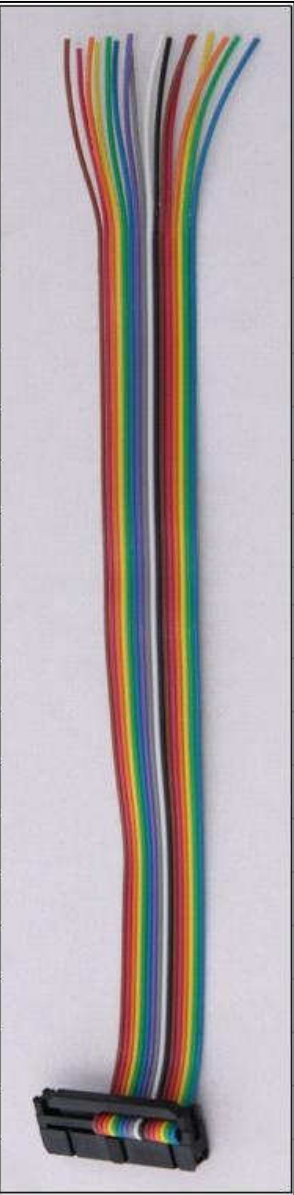			
Pin	Colore Colour		
11	Non usato Not used		
12	Non usato Not used		
13	Non usato Not used		
14	Non usato Not used		
15	Non usato Not used		
16	Blu Blue		
17	Viola Violet		
18	Grigio Grey		
19	Bianco White		
20	Nero Black		
21	Marrone Brown		
22	Rosso Red		
23	Non usato Not used		
24	Giallo Yellow		
25	Non usato Not used		
26	Non usato Not used		

In order to connect the JTAG flat cable it is necessary to remove the resin present over the board on the connection zone. To prevent any damage to the ECU perform such removing operation very gently and with care. At the end of this operation, before proceeding with the soldering, set the ecu back into the vehicle and check that the truck runs fine.

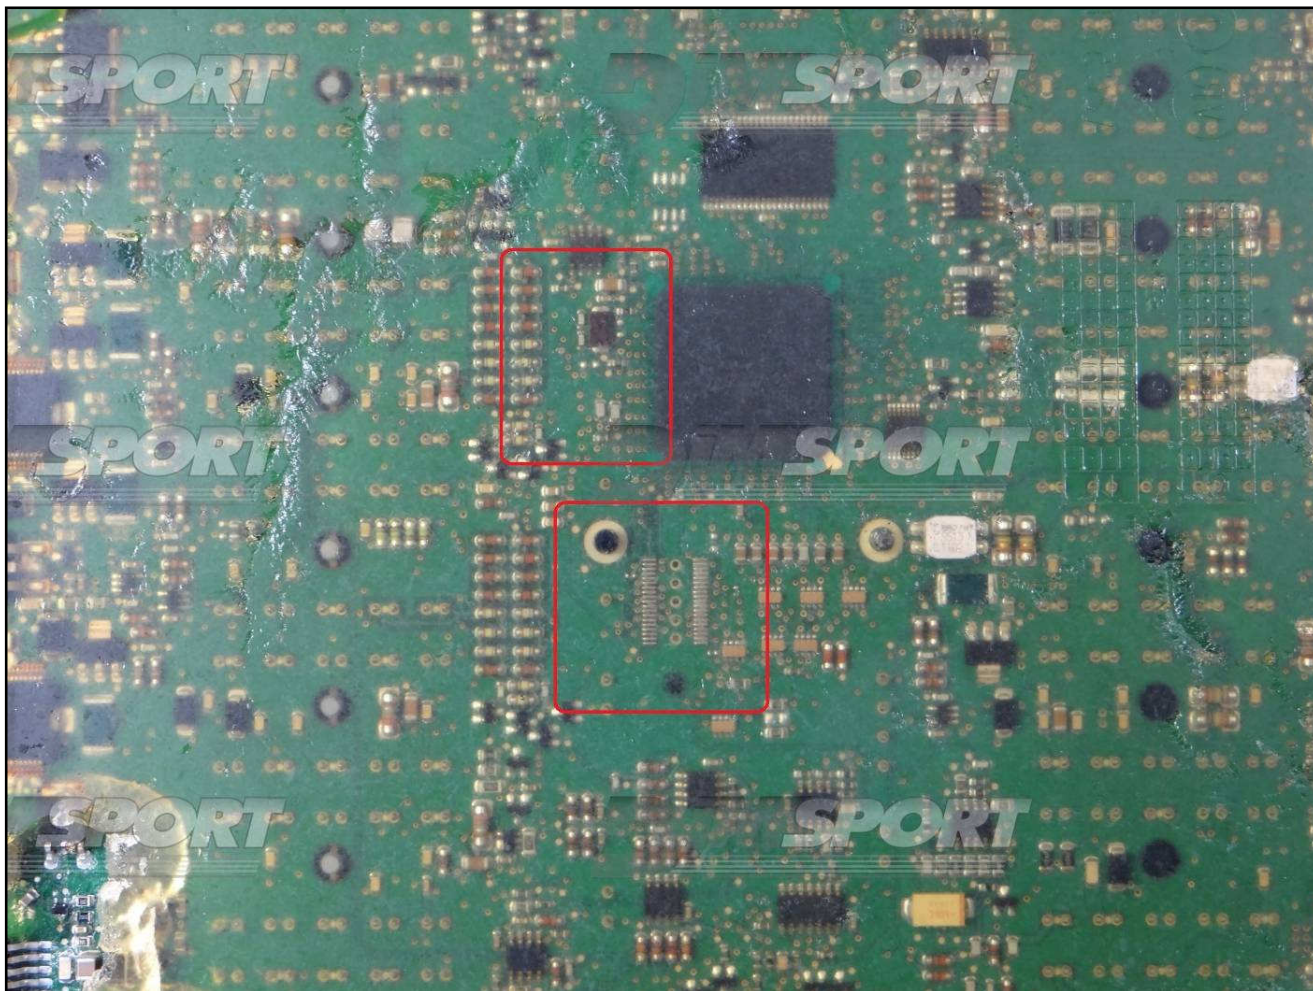

Connect the wires without creating any short-circuit among the pads.

