
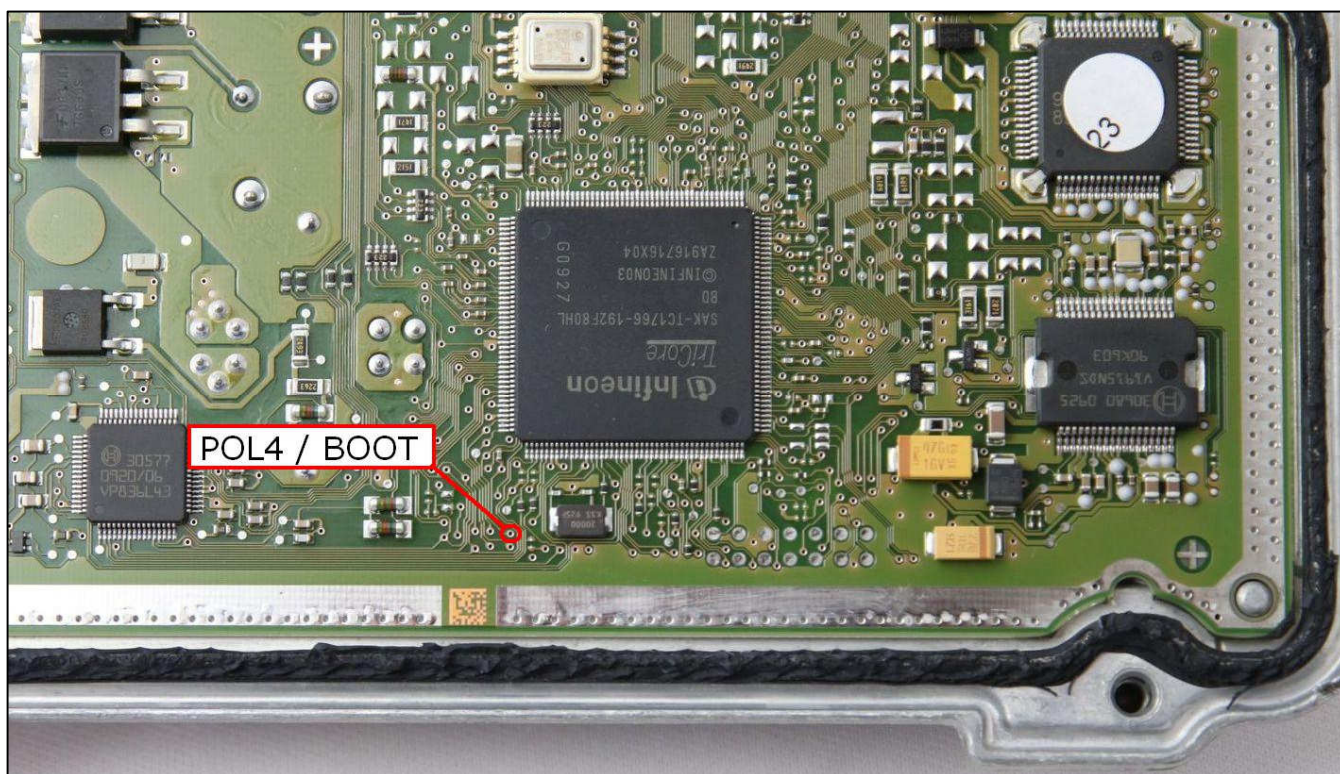


PLUGIN 181

DIRECT CONNECTION

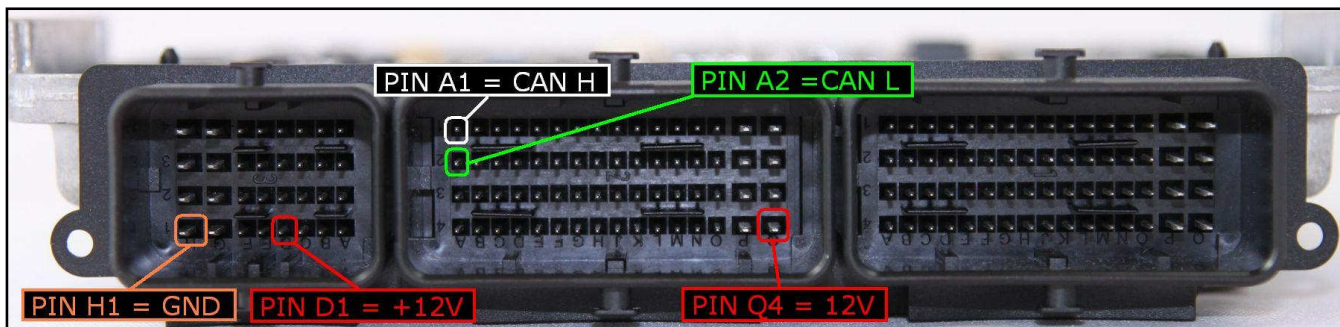

DIMA CONNECTION

Connect the boot pin to the pad n.10 of the soldering laybypins.

