


NEW TRASDATA

Plugin: 1381 DELPHI DCM6.2AP BAM GWM
1483 DELPHI DCM6.2AP BAM JAC

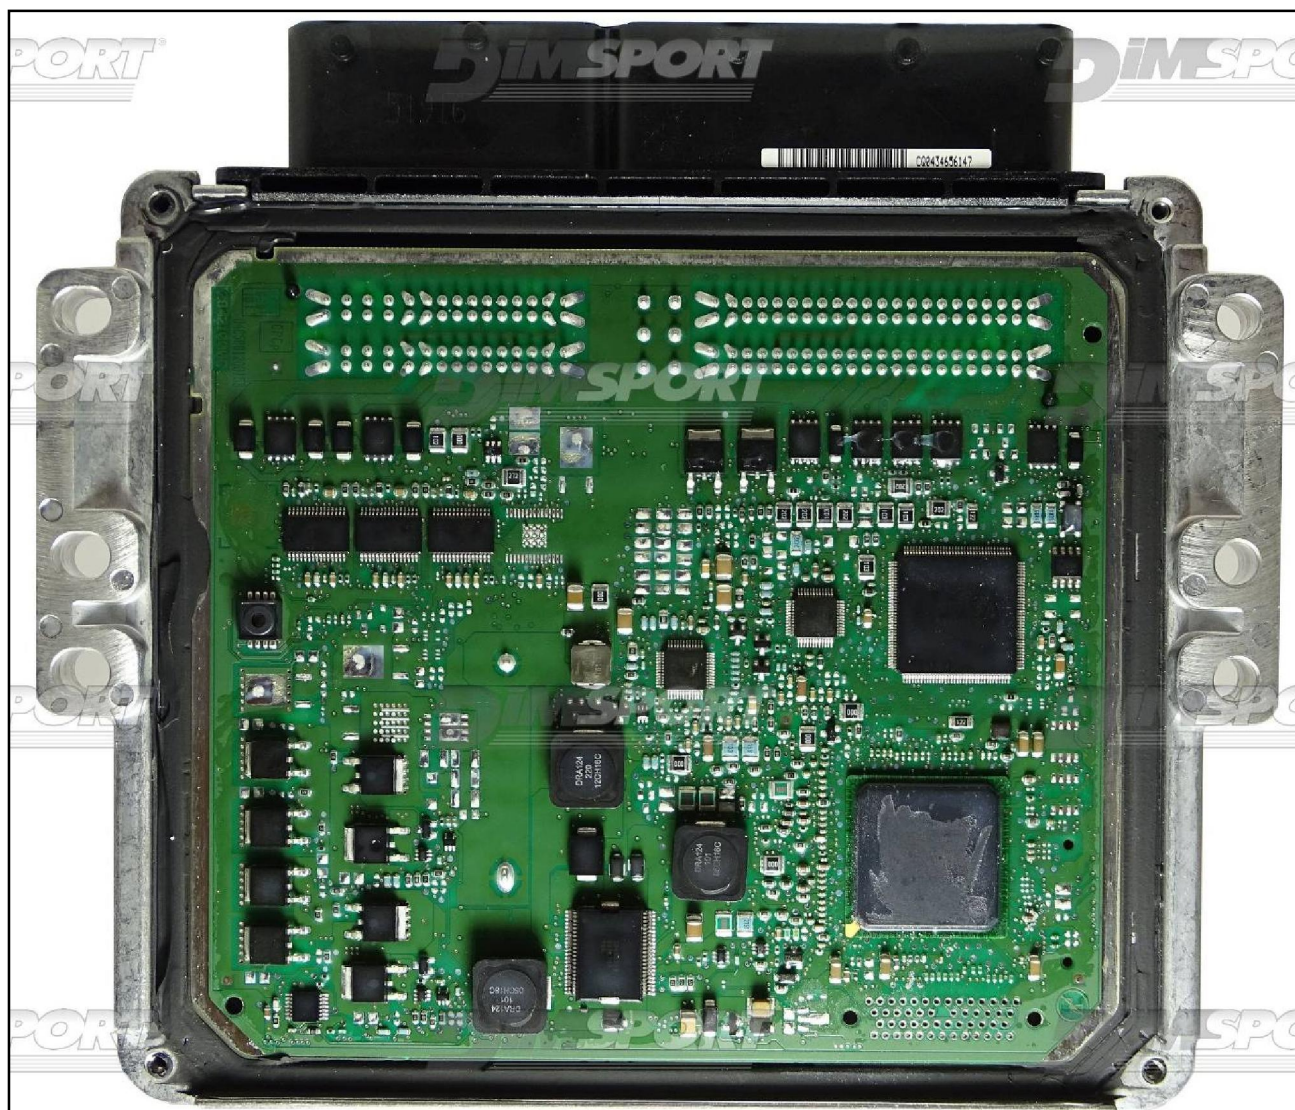





ECU CONNECTOR

In order to connect to the ECU use the cable F32GN037C.

Make sure that the POWER led (red) on NEW TRASDATA is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

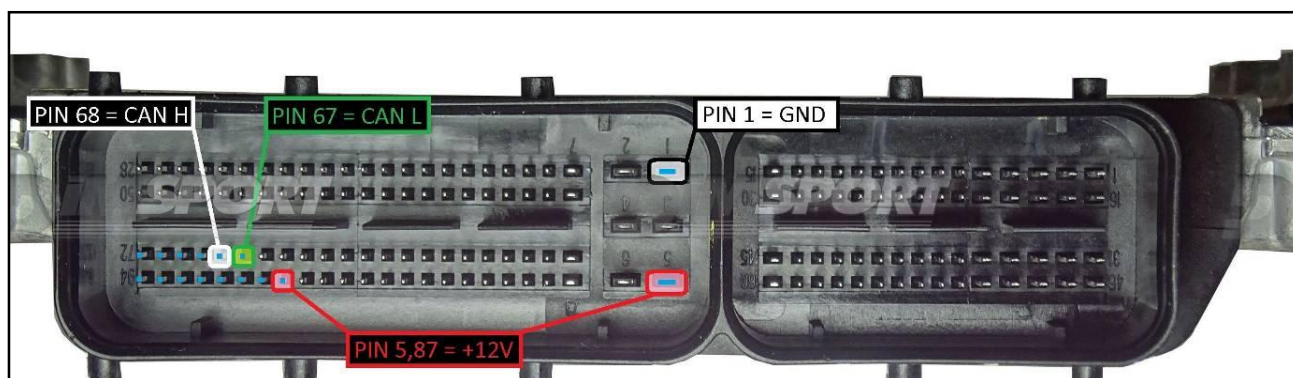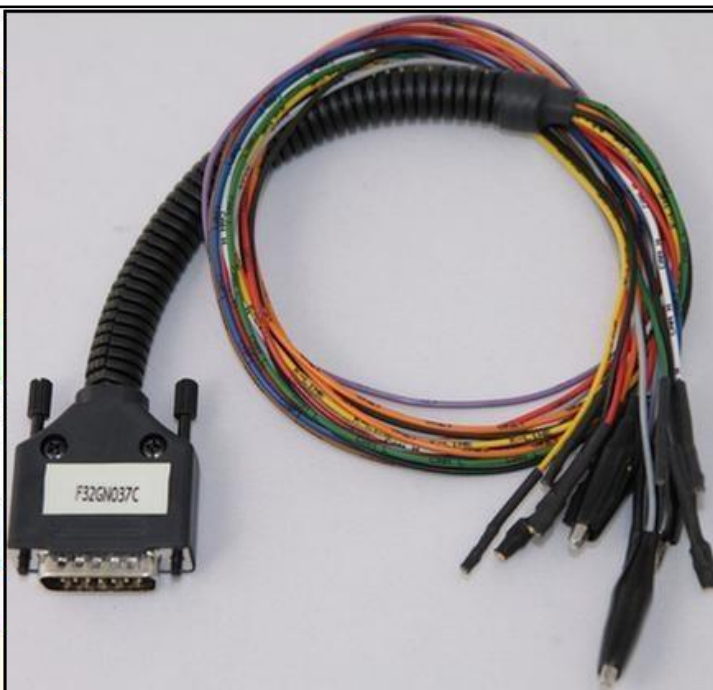

DIRECT CONNECTION CNF1

Connect the BLUE wire of the cable F32GN037C as described here below:

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION
	BLU	CNF1
	BLUE	

