
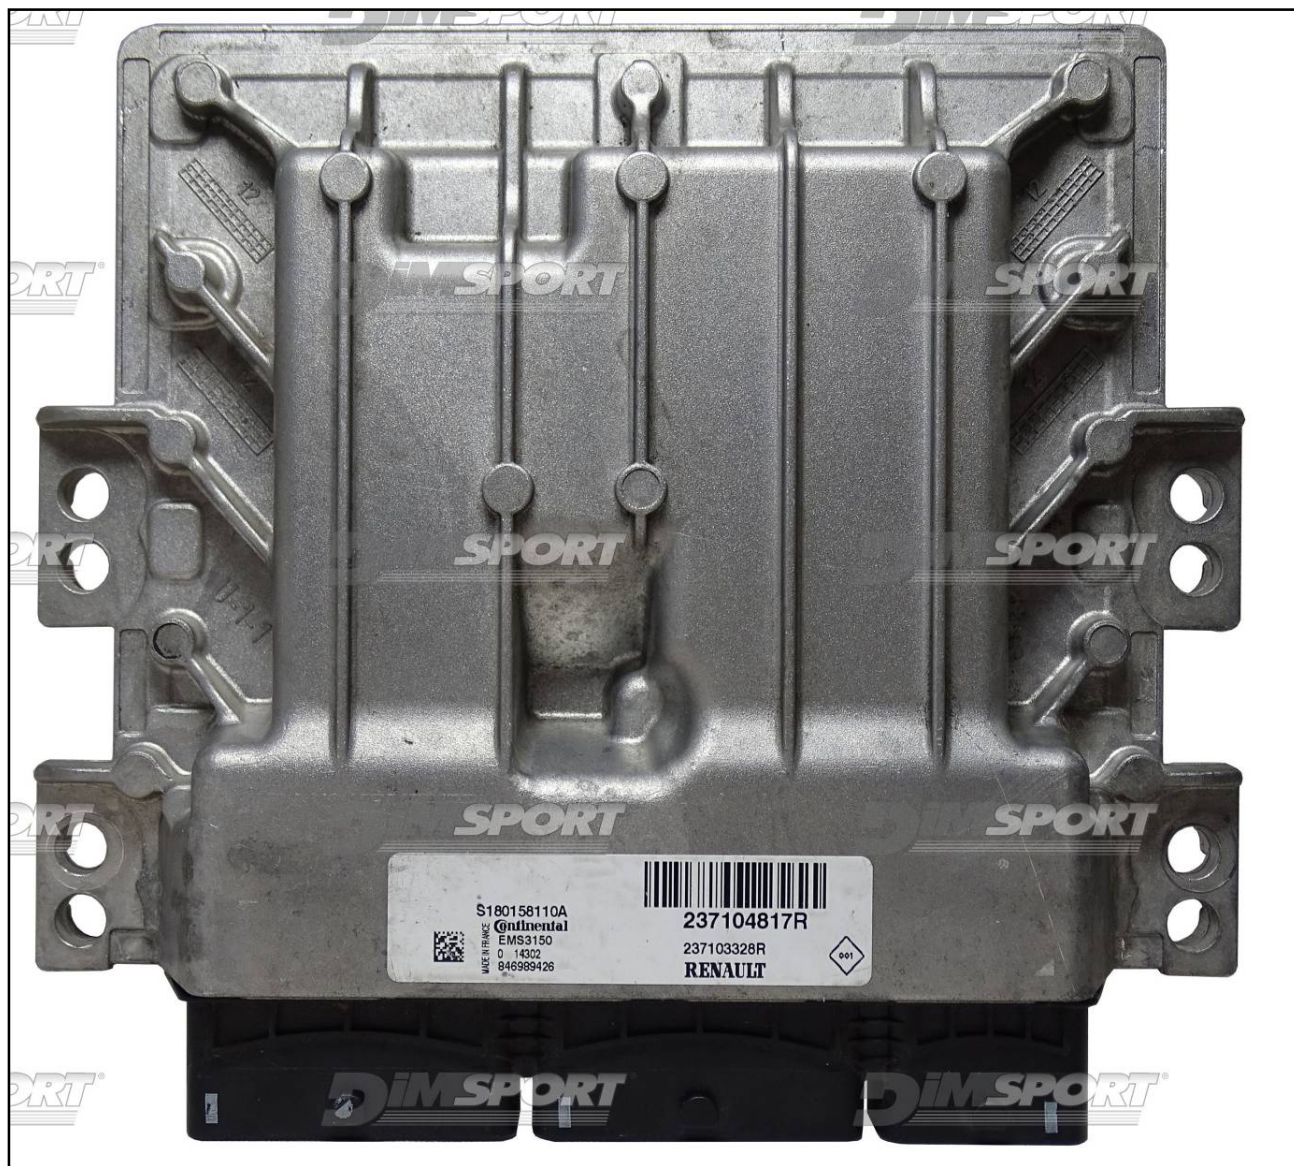


PLUGIN 1361 :NEW TRASDATA


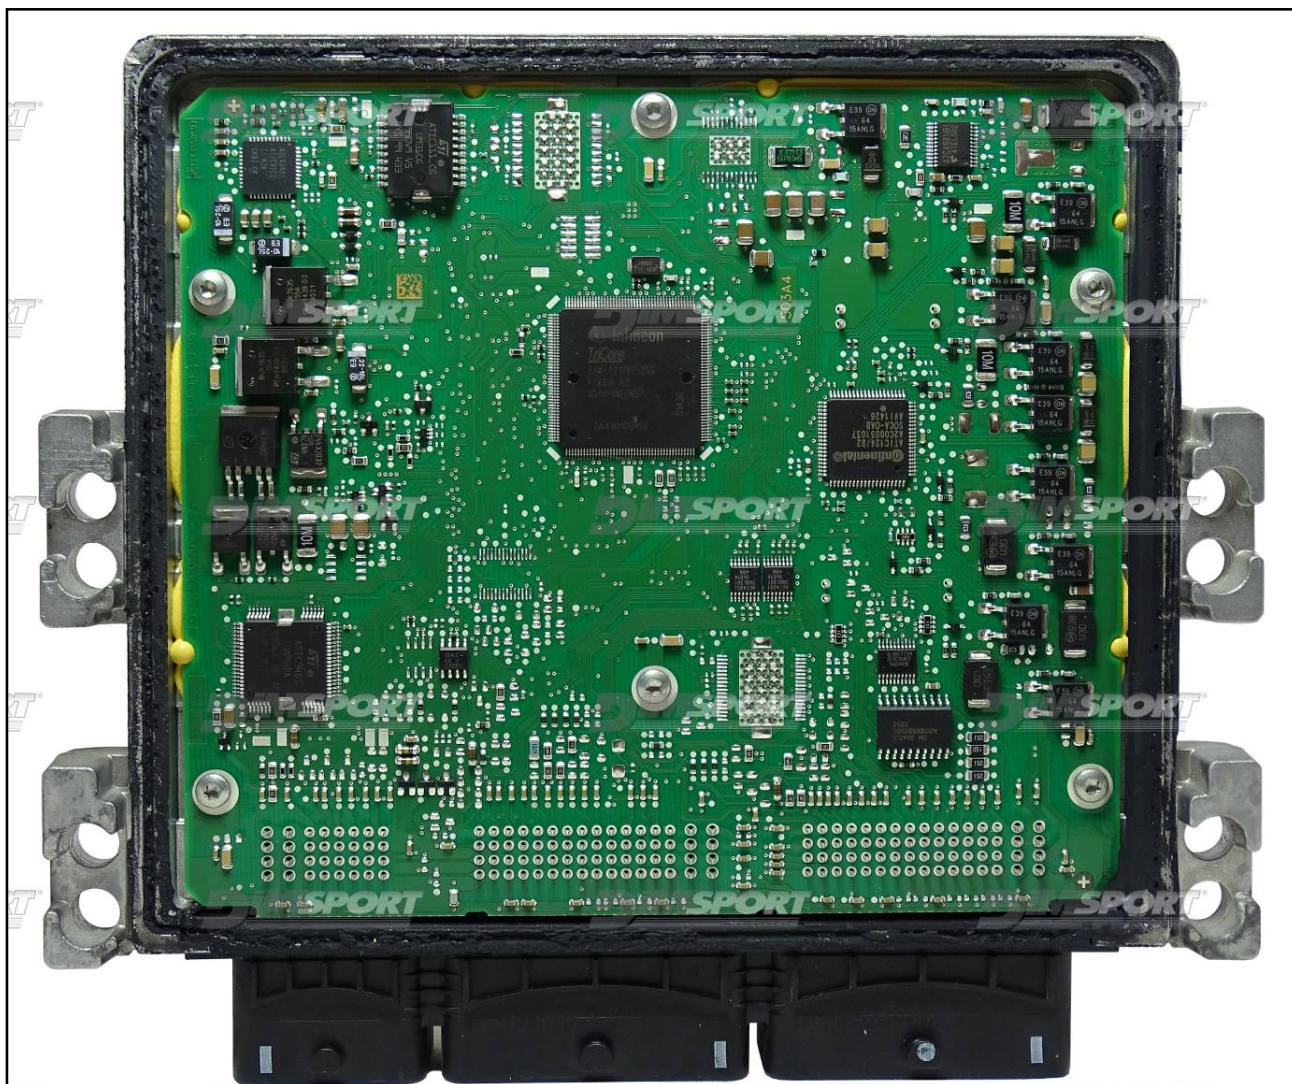


ECU CONNECTOR

In order to connect to the ECU use the cable F32GN037C.

Make sure that the POWER led (red) on NEW TRASDATA is ON.

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION
	ROSSO RED	POSITIVO DIRETTO POWER BATTERY
	ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
	NERO BLACK	MASSA GND
	GIALLO YELLOW	KLINE
	VERDE GREEN	CAN LOW
	BIANCO WHITE	CAN HIGH
	GRIGIO GREY	POL4 BOOT
	BLU BLUE	POL5 CNF1
	VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
	MARRONE BROWN	RESET

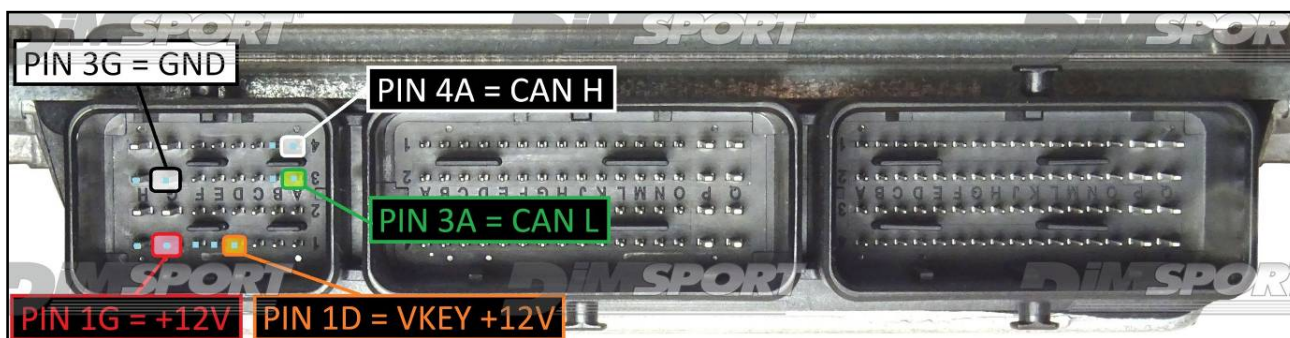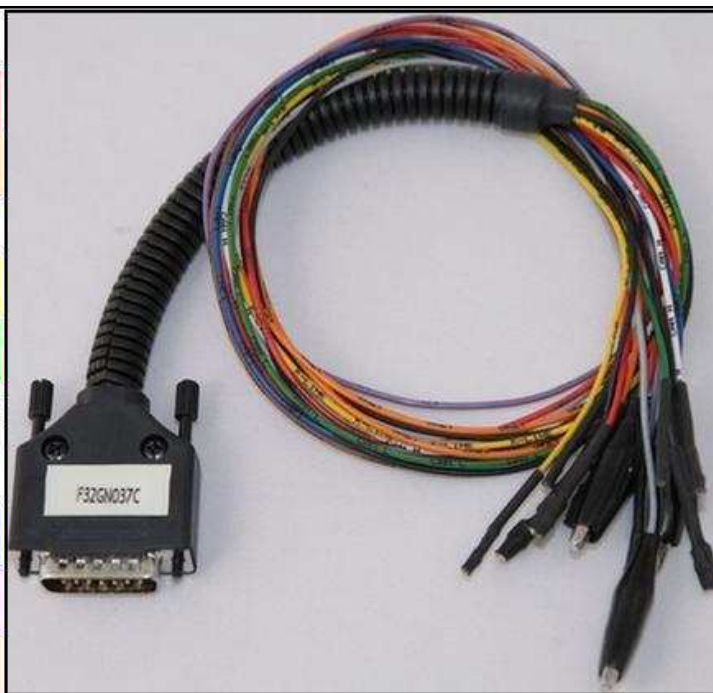

WARNING: due to the relevant power absorbed by the ECU at the beginning of the communication we suggest to feed the ECU with an external power supply or a car battery. Connect the power cable F32GN003 to the New Trasdata and then to the power source.

The ECU must be powered through the New Trasdata using the F32GN0037C cable

BOOT & CNF1 CONNECTION

In order to read&write properly the ECU it is necessary to perform a LINK, remove it before placing back the ECU into the vehicle.

Connect the GREY and BLUE wires of the cable F32GN037C as described here below:

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1

