




NT_HITACHI_SH7055_MEC38-310_NISSAN

VER 02.00

PLUGIN 661 :NEW TRASDATA



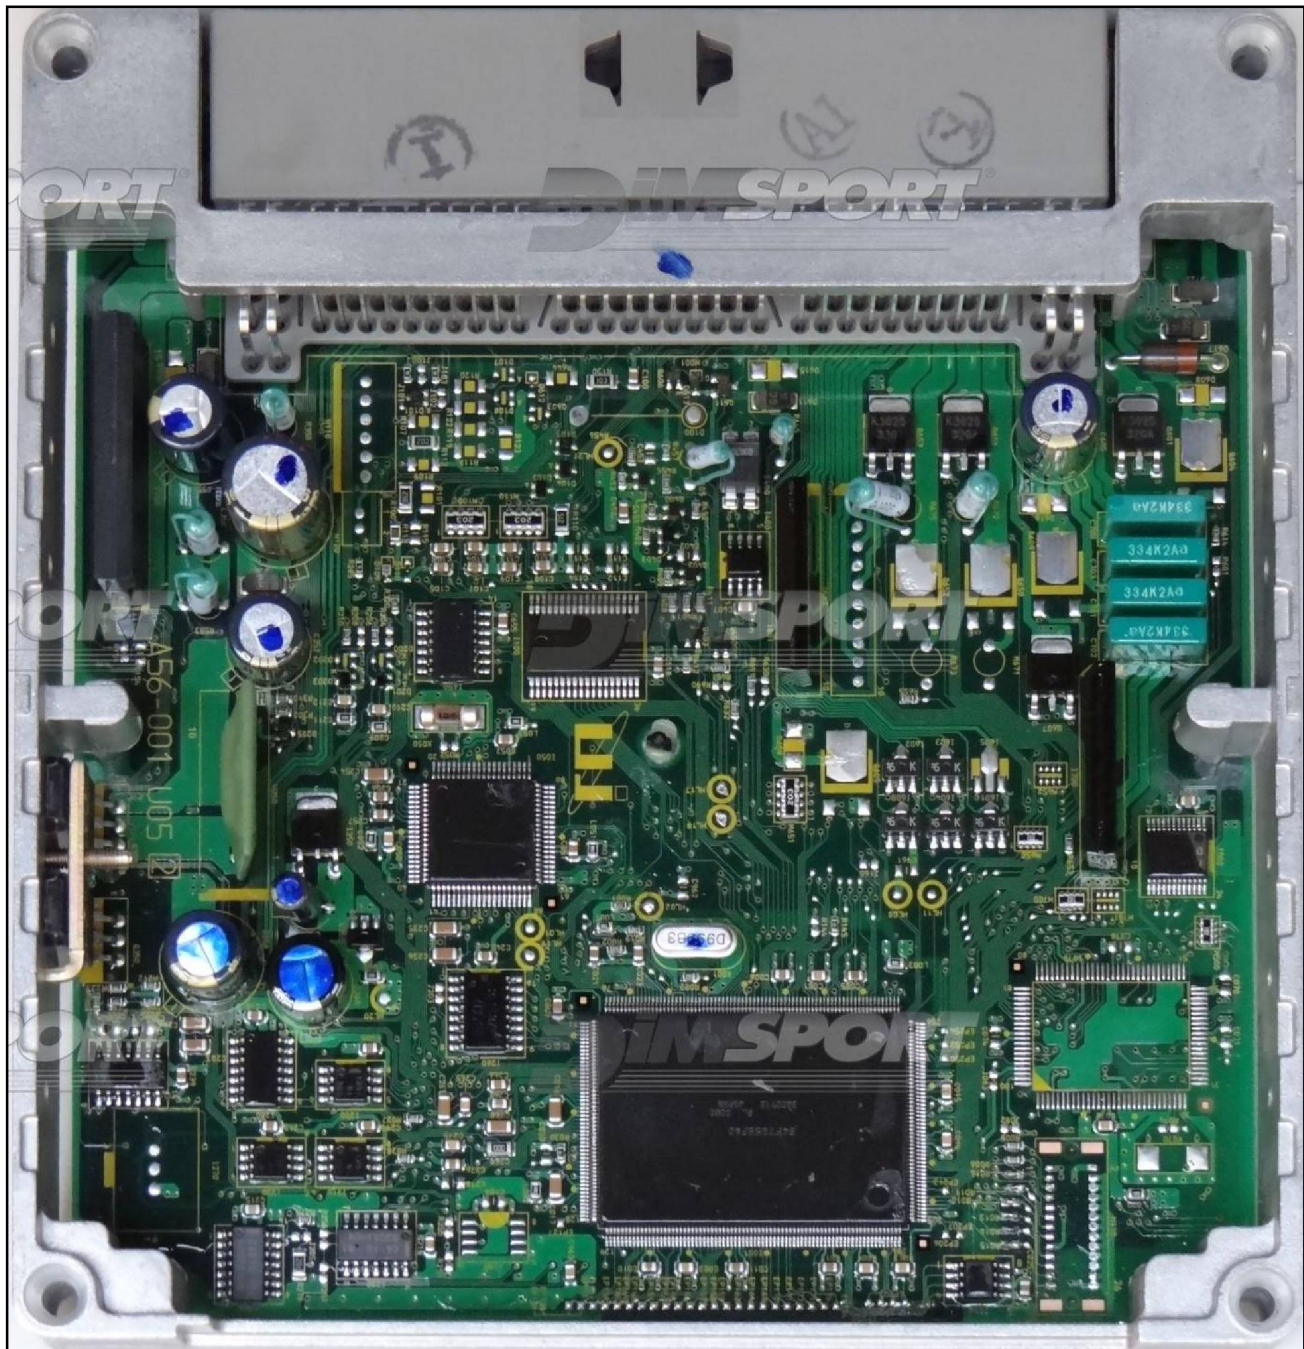


DIRECT CONNECTION


In order to connect to the ECU use the CABLE F32GN037C.

Make sure that the POWER led (red) on NEW TRASDATA is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

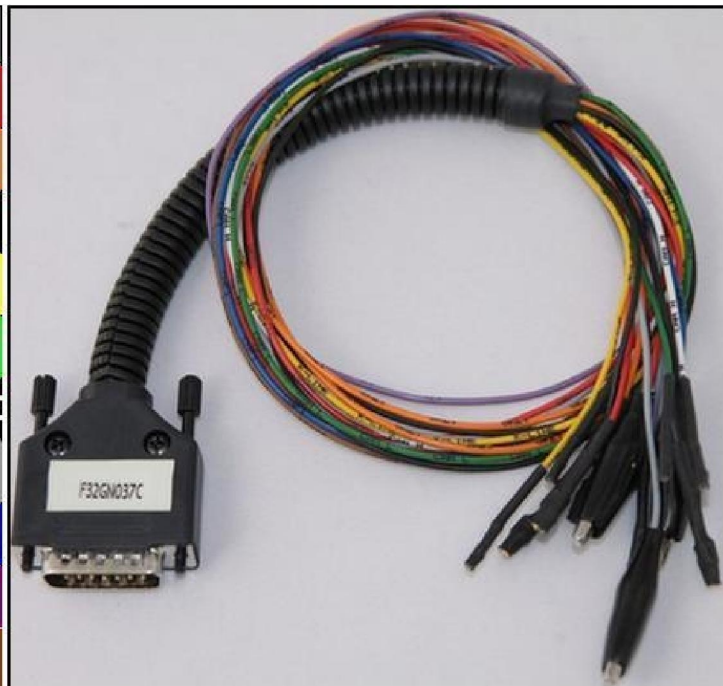

ECU CONNECTOR

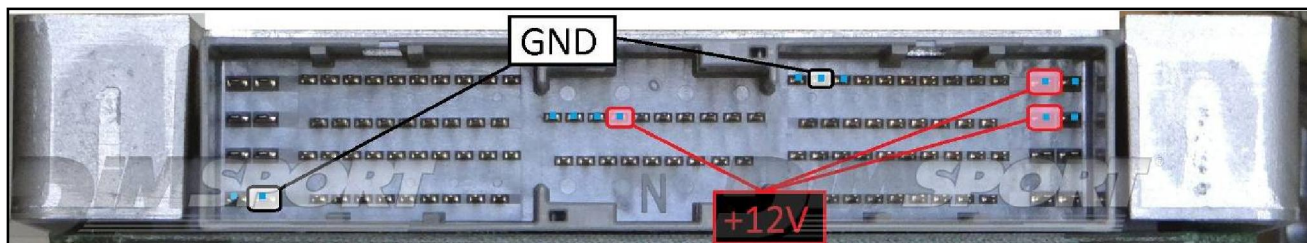

To the power feeding pins +12V you can connect both wires red (VECU) and orange VKEY) of the F32GN037C cable, they both have 12V signal.

ECU DIRECT CONNECTION FOR READING & WRITING:

For the READING and WRITING procedure use the FLAT cable F34NTF51

			
Pin	Colore Colour		
1	Marrone Brown		
2	Non usato Not used		
3	Non usato Not used		
4	Giallo Yellow		
5	Verde Green		
6	Blu Blue		
7	Viola Violet		
8	Grigio Grey		
9	Bianco White		
10	Nero Black		

In order to perform properly the reading and writing operations it is necessary to remove the resistor R450 displayed in the picture here below. Set back the resistor before placing back the ECU into the vehicle.

