


PLUGIN 343 :NEW TRASDATA

Lay-by pins are placed on the lower part of the ECU. It is possible ONLY the free wires connection with the universal adapter F34NTF051.


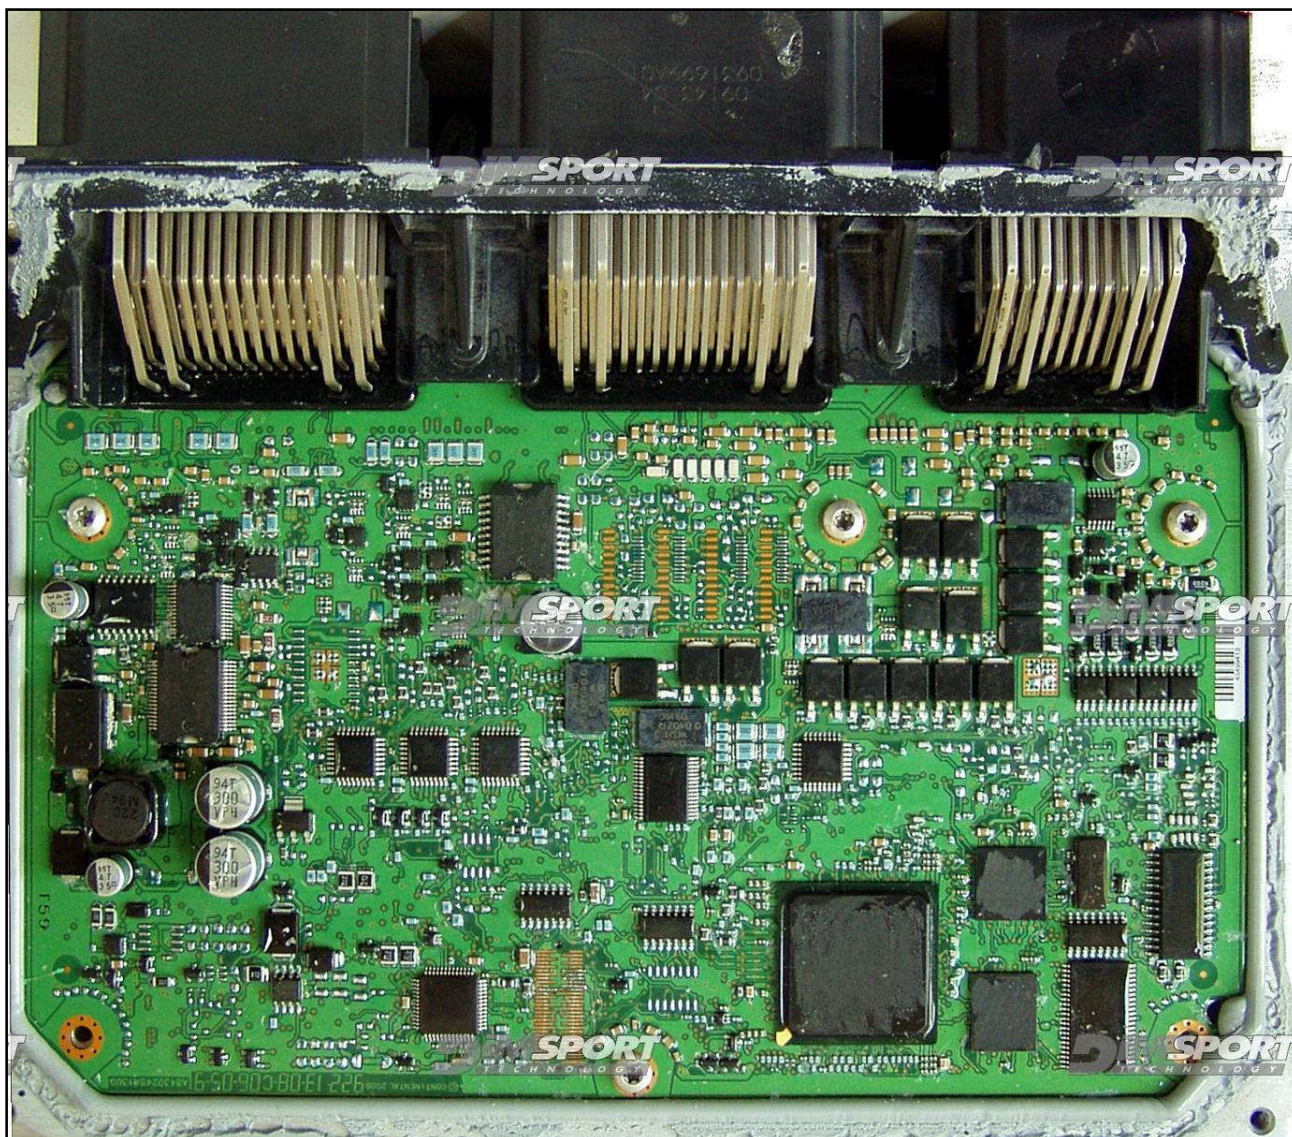


ECU CONNECTOR

In order to connect to the ECU use the CABLE F32GN037C.


Make sure that the POWER led (red) on NEW TRASDATA is ON.

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION
ROSSO RED		POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE		POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK		MASSA GND
GIALLO YELLOW		KLINE
VERDE GREEN		CAN LOW
BIANCO WHITE		CAN HIGH
GRIGIO GREY		POL4 BOOT
BLU BLUE		POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY		TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN		RESET

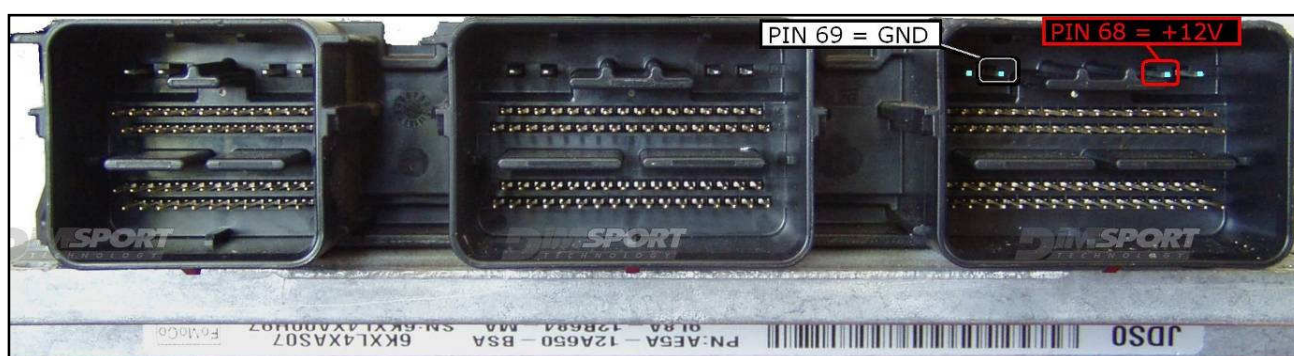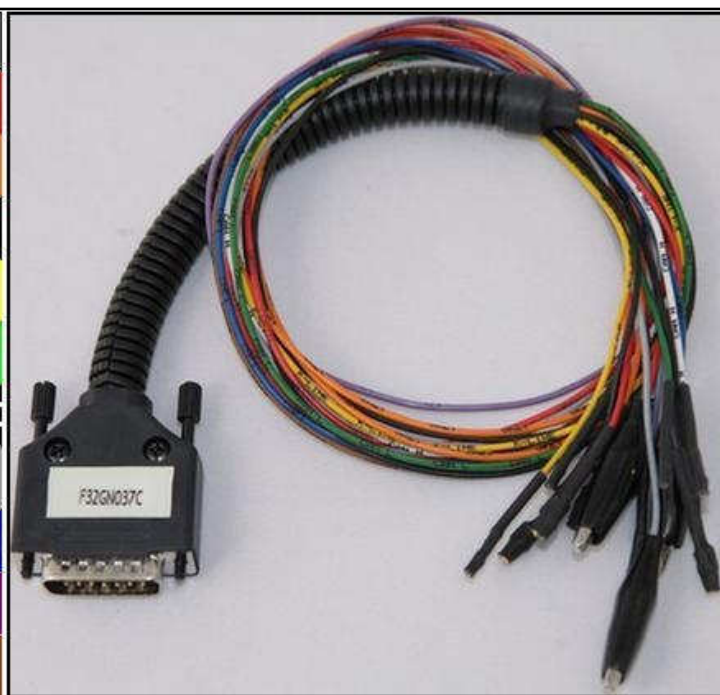

FREE WIRES BDM CONNECTION

Connect the wire F34NTF051 as shown here below :

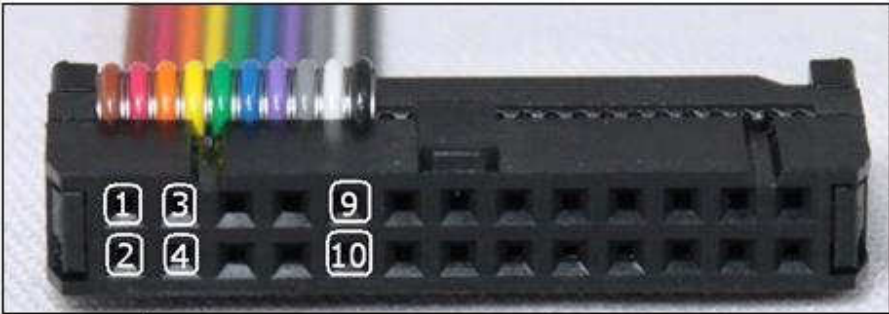

Pin	Colore Colour
1	Marrone Brown
2	Non usato Not used
3	Non usato Not used
4	Non usato Not used
5	Verde Green
6	Non usato Not used
7	Viola Violet
8	Grigio Grey
9	Non usato Not used
10	Non usato Not used

