

PLUGIN 966 : NEW TRASDATA

GPT CONNECTION MODE


To perform the GPT connection it is necessary to use both the ANALOG PORT and the DIGITAL PORT.

GPT connection with loose wires


Connect the F32GN037 cable to the **ANALOG PORT**

Connect the F34NTA15 to the **DIGITAL PORT**, use the YELLOW and ORANGE wires for the GPT signals.

F34NTA15

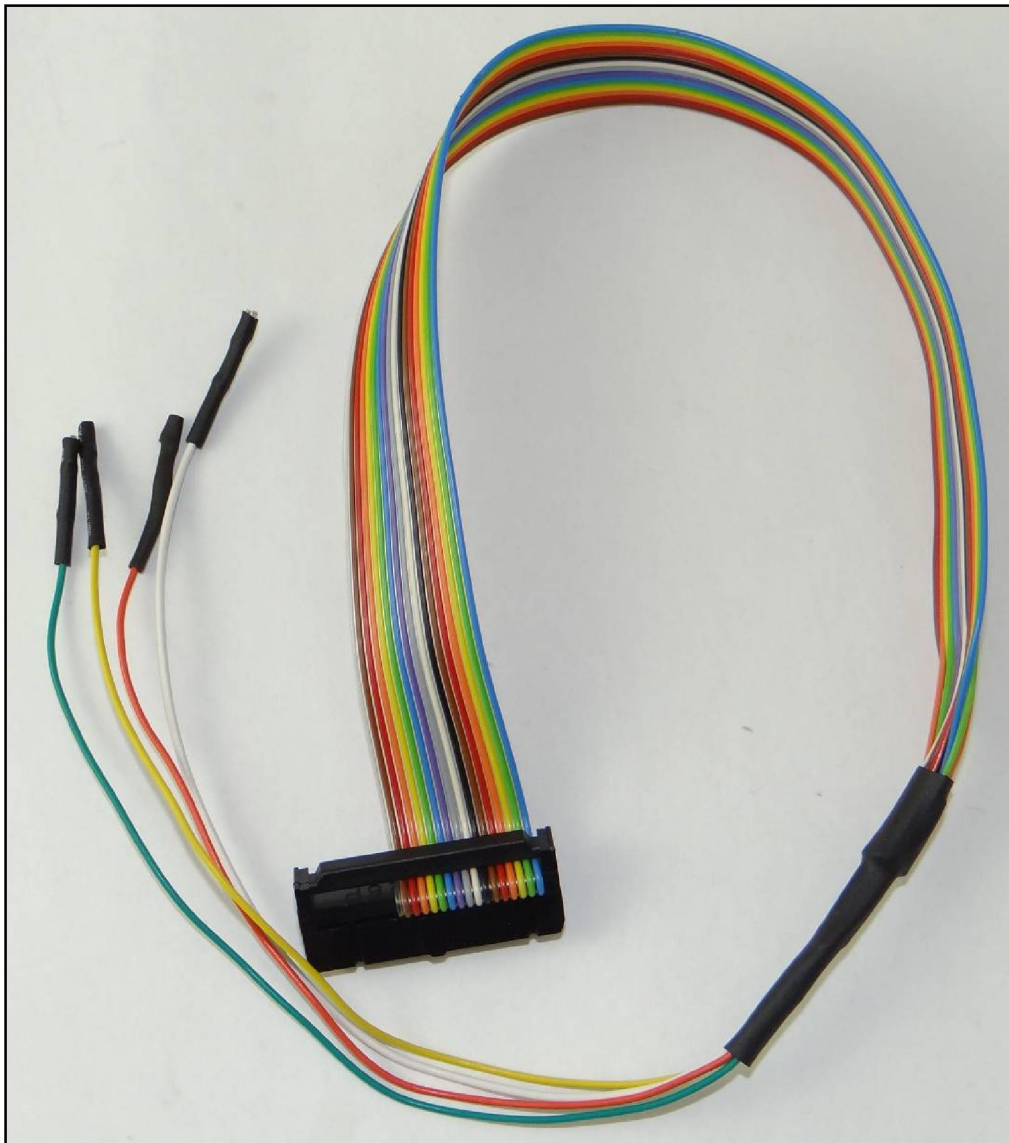




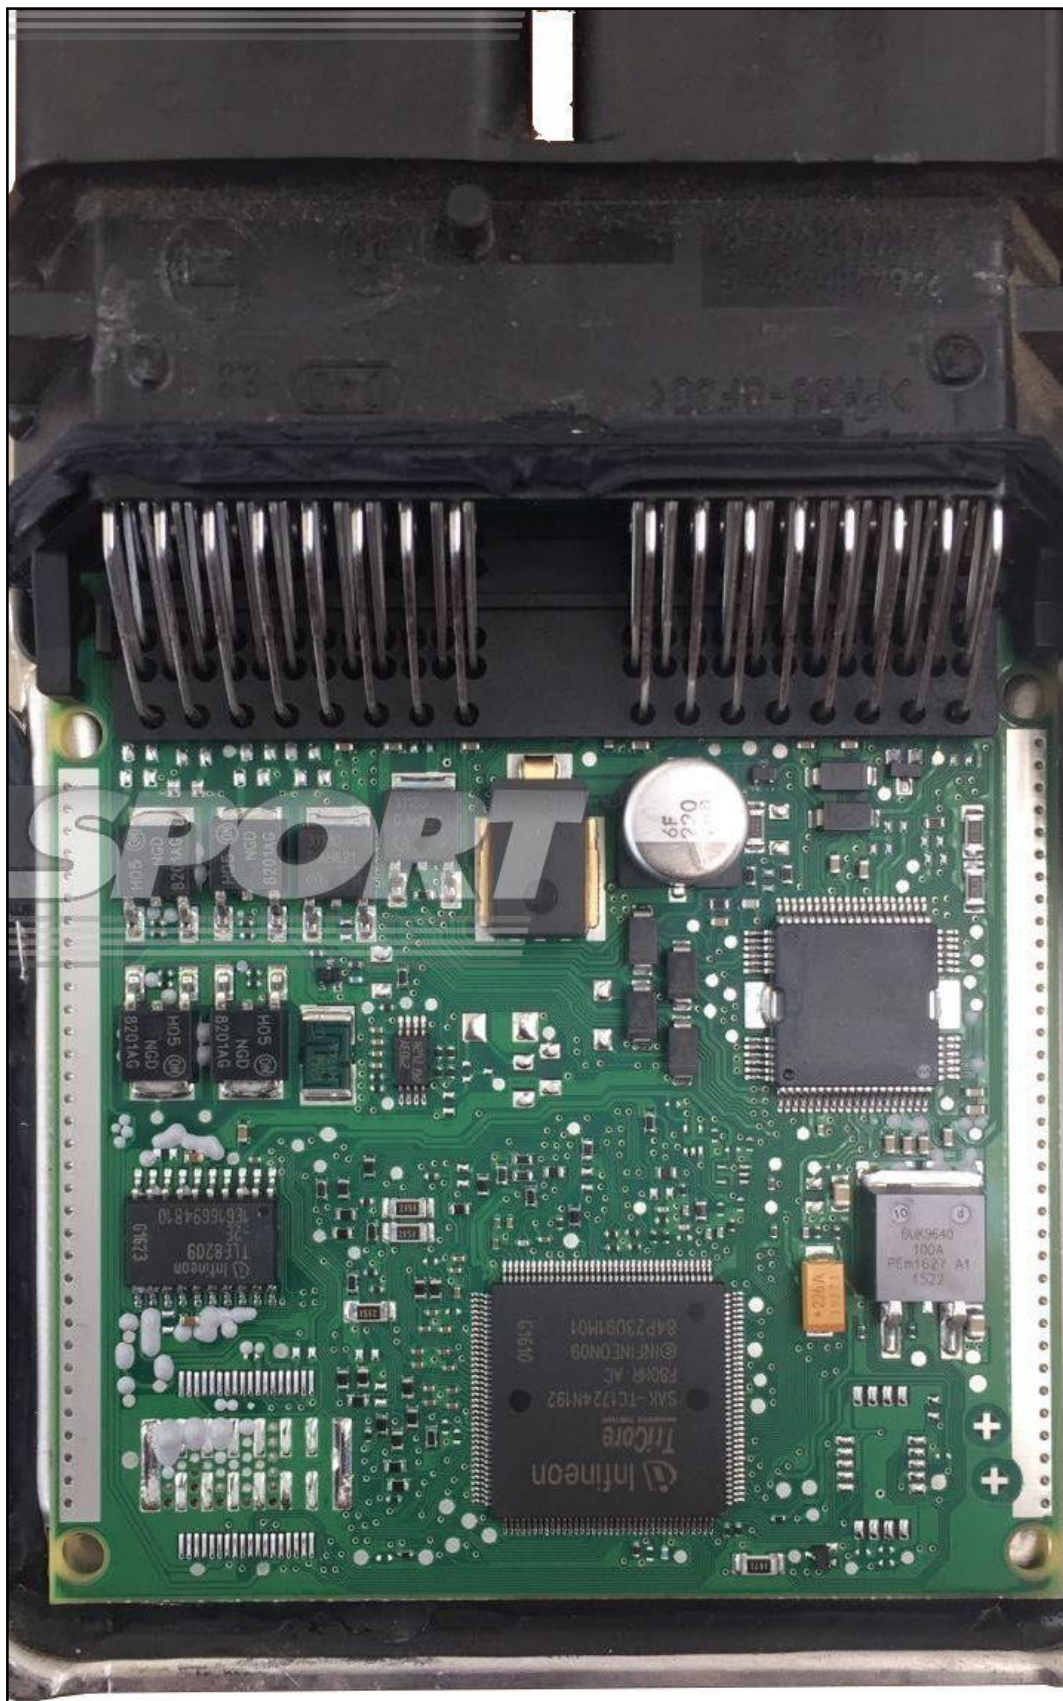

ECU CONNECTOR


For the connection use the cable F32GN037C connected to the ECU.
Make sure that the POWER led (red) on NEW TRASDATA is ON.

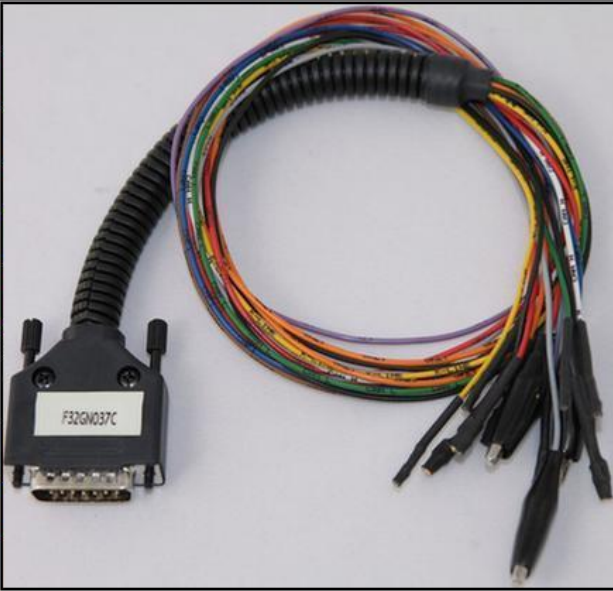COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	CAN HIGH	
GRIGIO GREY	POL4 BOOT	
BLU BLUE	POL5 CNF1	
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE	
MARRONE GREY	RESET	

DIRECT GPT CONNECTION

GPT connection is required for the first time only, after the first ECU reading it is not necessary any longer. Connect the F34NTA15 flat cable to the GPT_S1,GPT_S2 pins.

PIN / Colore PIN / Color	DESCRIZIONE DESCRIPTION
	GPT_S2
	GPT_S1

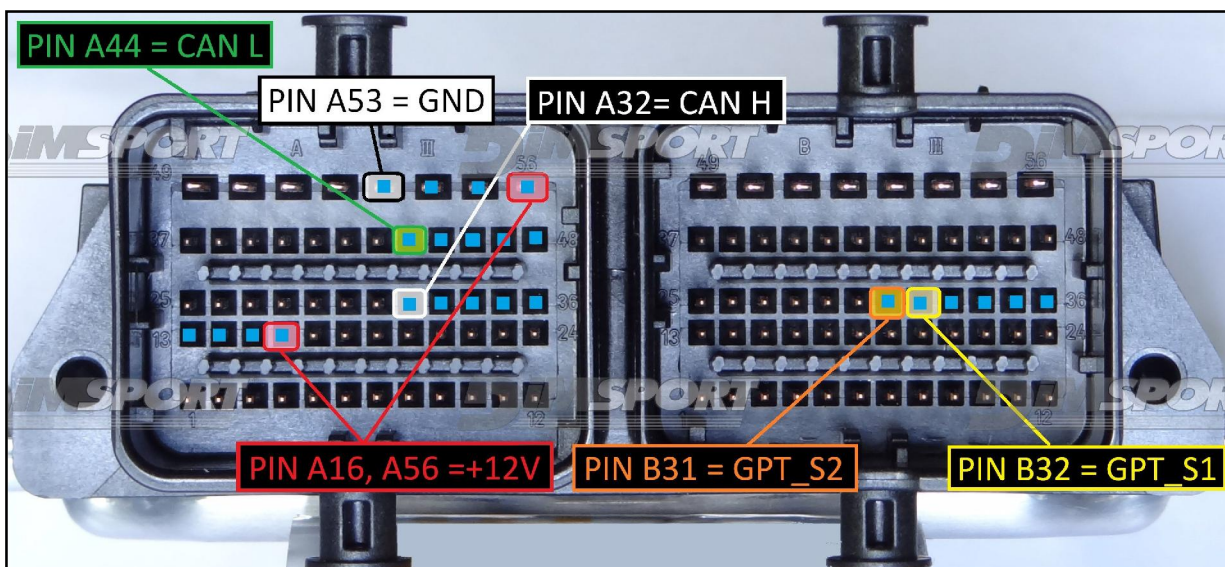

DIRECT BOOT&CNF1 CONNECTION

Connect the GREY&BLUE wires of the cable F32GN037C as shown in the picture.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1

