


PLUGIN 1077:NEW TRASDATA

HGDAM4DC3A
CONTINENTAL

5WY4Q40E **39139-2G110**
Index 01 SIM2K-341 **39109-2G110**
K 19.04.12/5 0254 **Made In Korea**

T H G O C 2 4 G A 2




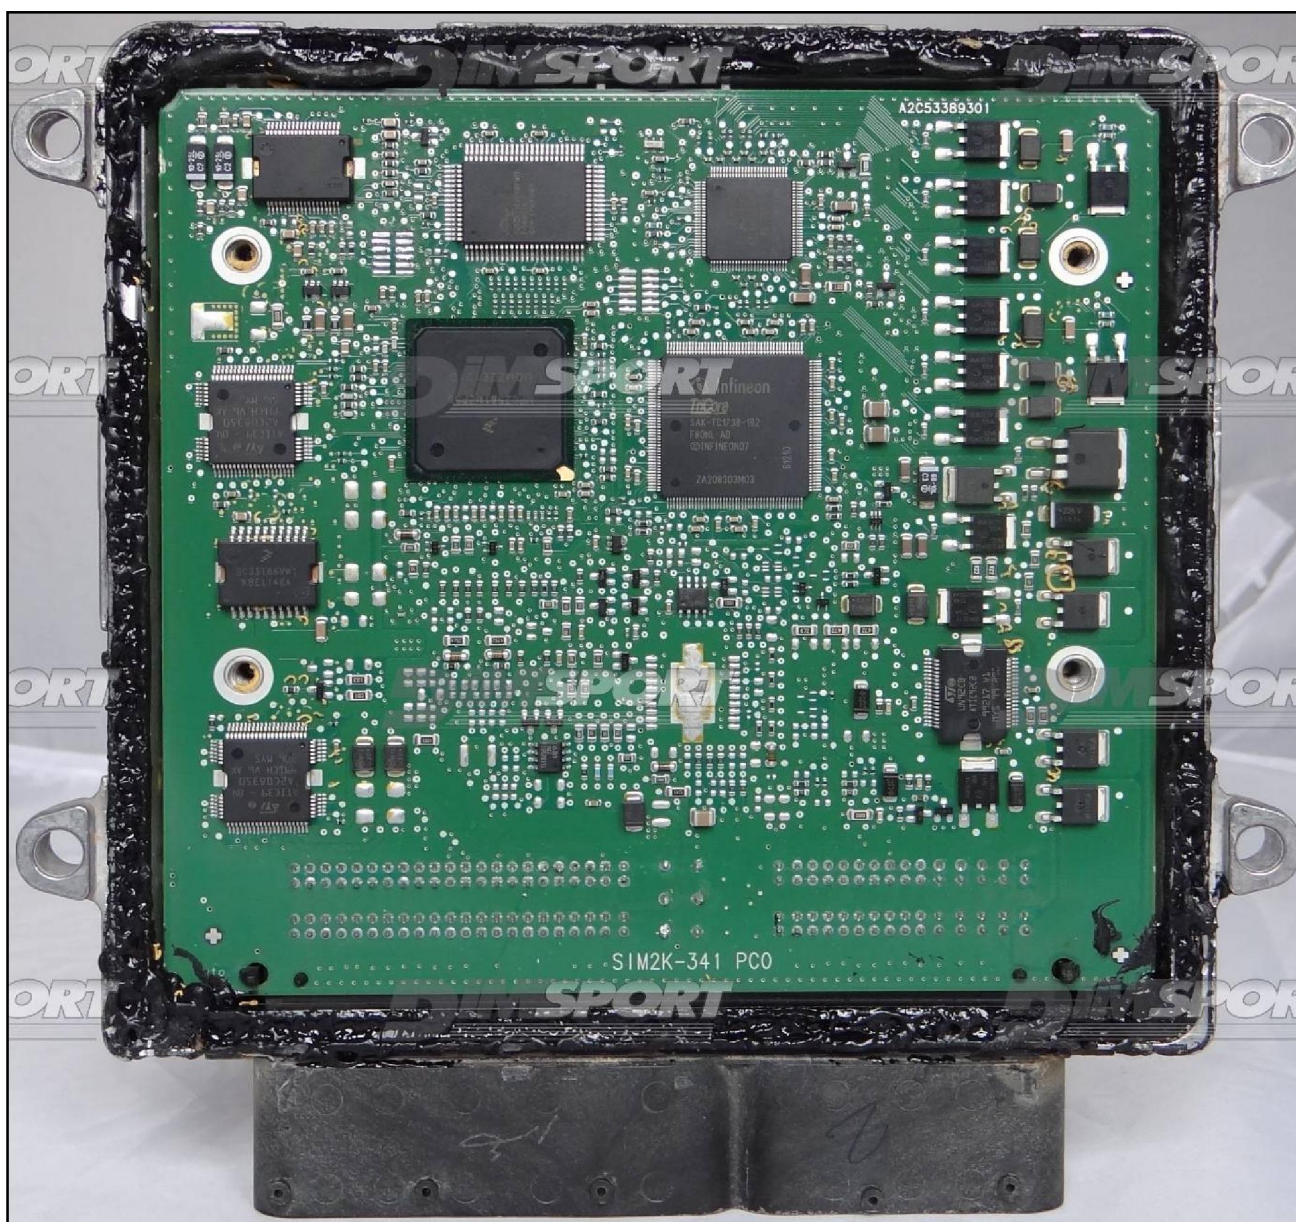


DIRECT CONNECTION

In order to connect to the ECU use the cable F32GN037C.


Make sure that the POWER led (red) on NEW TRASDATA is ON.

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION
ROSSO RED		POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE		POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK		MASSA GND
GIALLO YELLOW		KLINE
VERDE GREEN		CAN LOW
BIANCO WHITE		CAN HIGH
GRIGIO GREY		POL4 BOOT
BLU BLUE		POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY		TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN		RESET

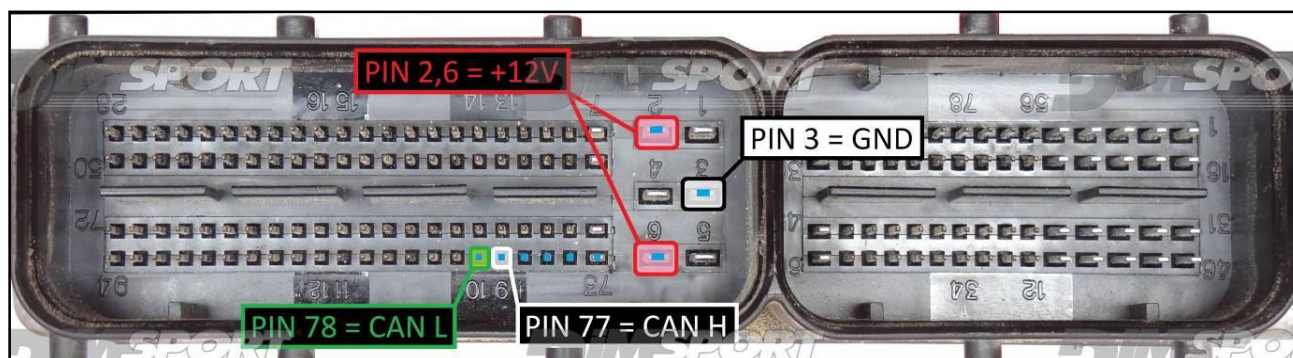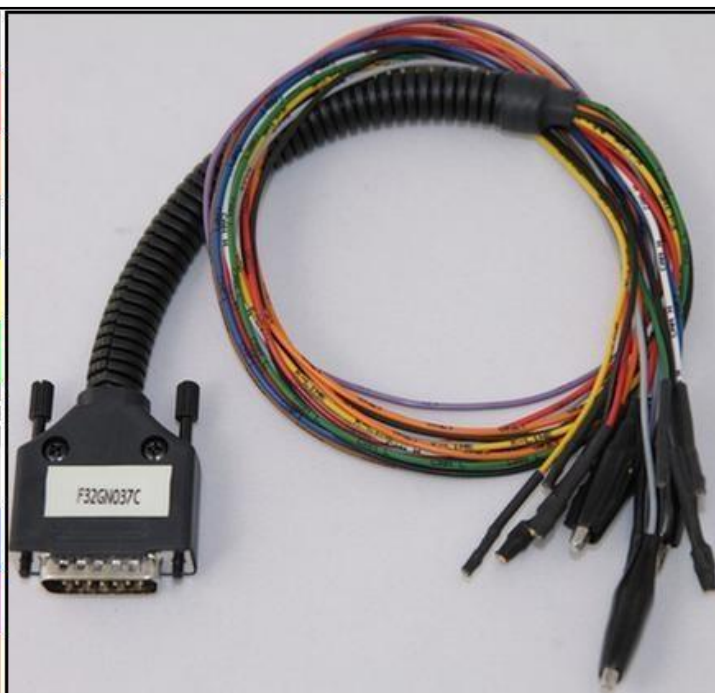

DIRECT BOOT CONNECTION

For a correct Microprocessor communication it is necessary to desolder and lift the pin of the component shown in the following picture.

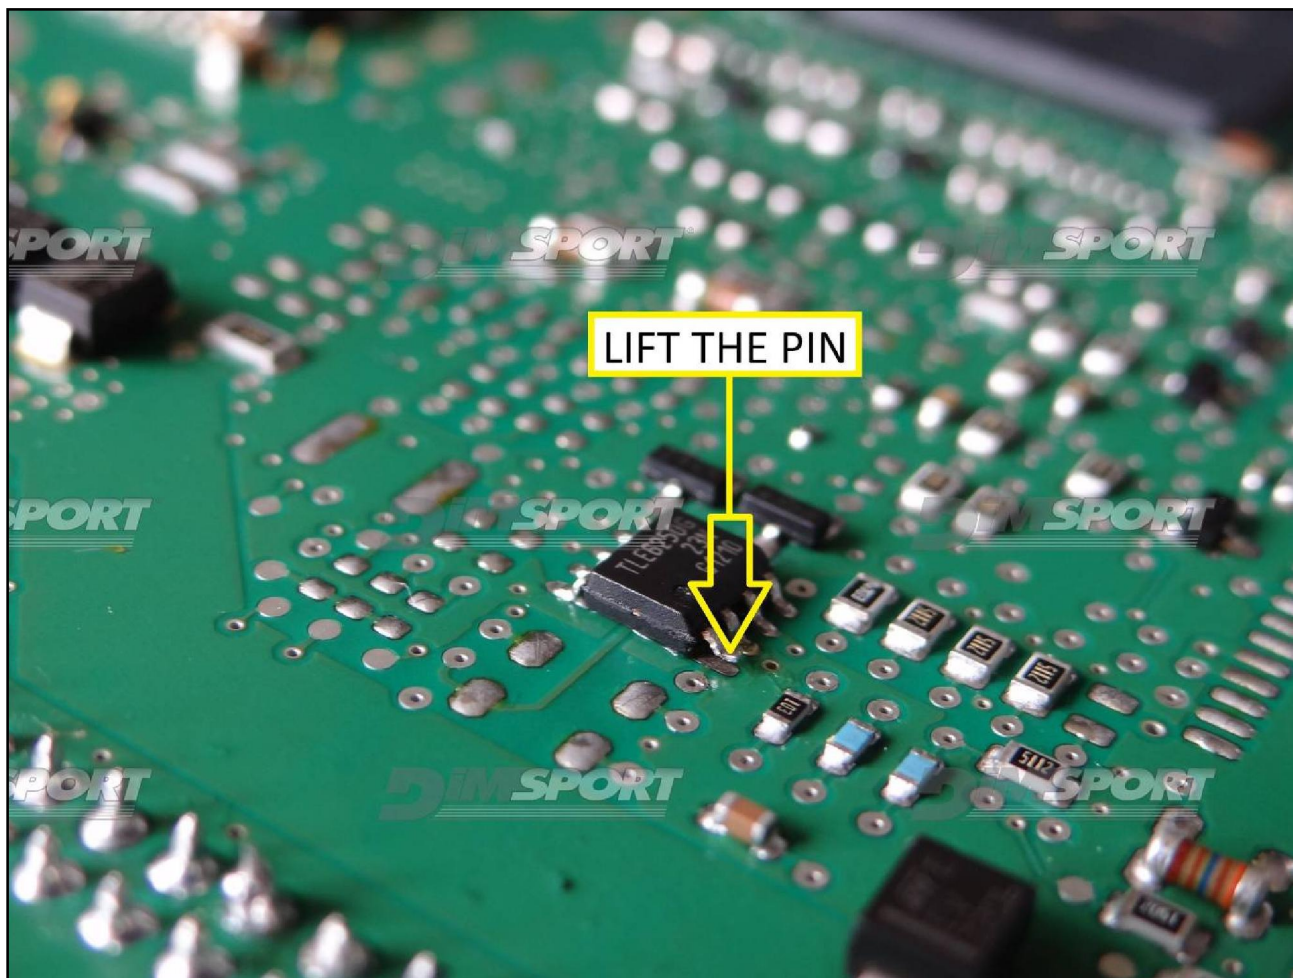

Connect the GREY wire of the cable F32GN037C as described here below:

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
GRIGIO GREY	POL4 BOOT

Warning

In order to read&write properly the ECU it is necessary to perform the LINK1, then perform the second LINK between the lifted pin of the component and the pad closed to the microprocessor. At the end of the procedures, before placing back the ECU into the vehicle, remove both LINKS and solder back the pin of the component.

