



TEMIC - 29F200 TSOP EURO 2/3 - Mercedes Benz [Diesel]

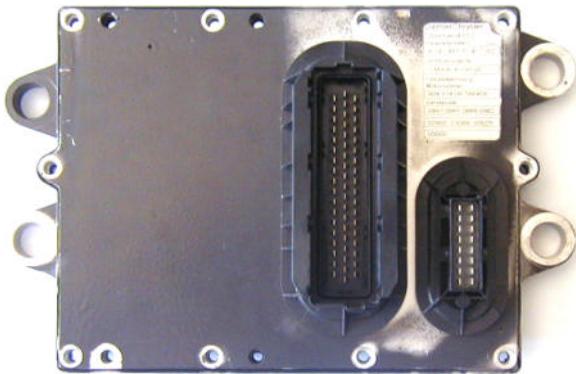

Effettuare un ponte sulla scheda:

Make a link on the pcb:

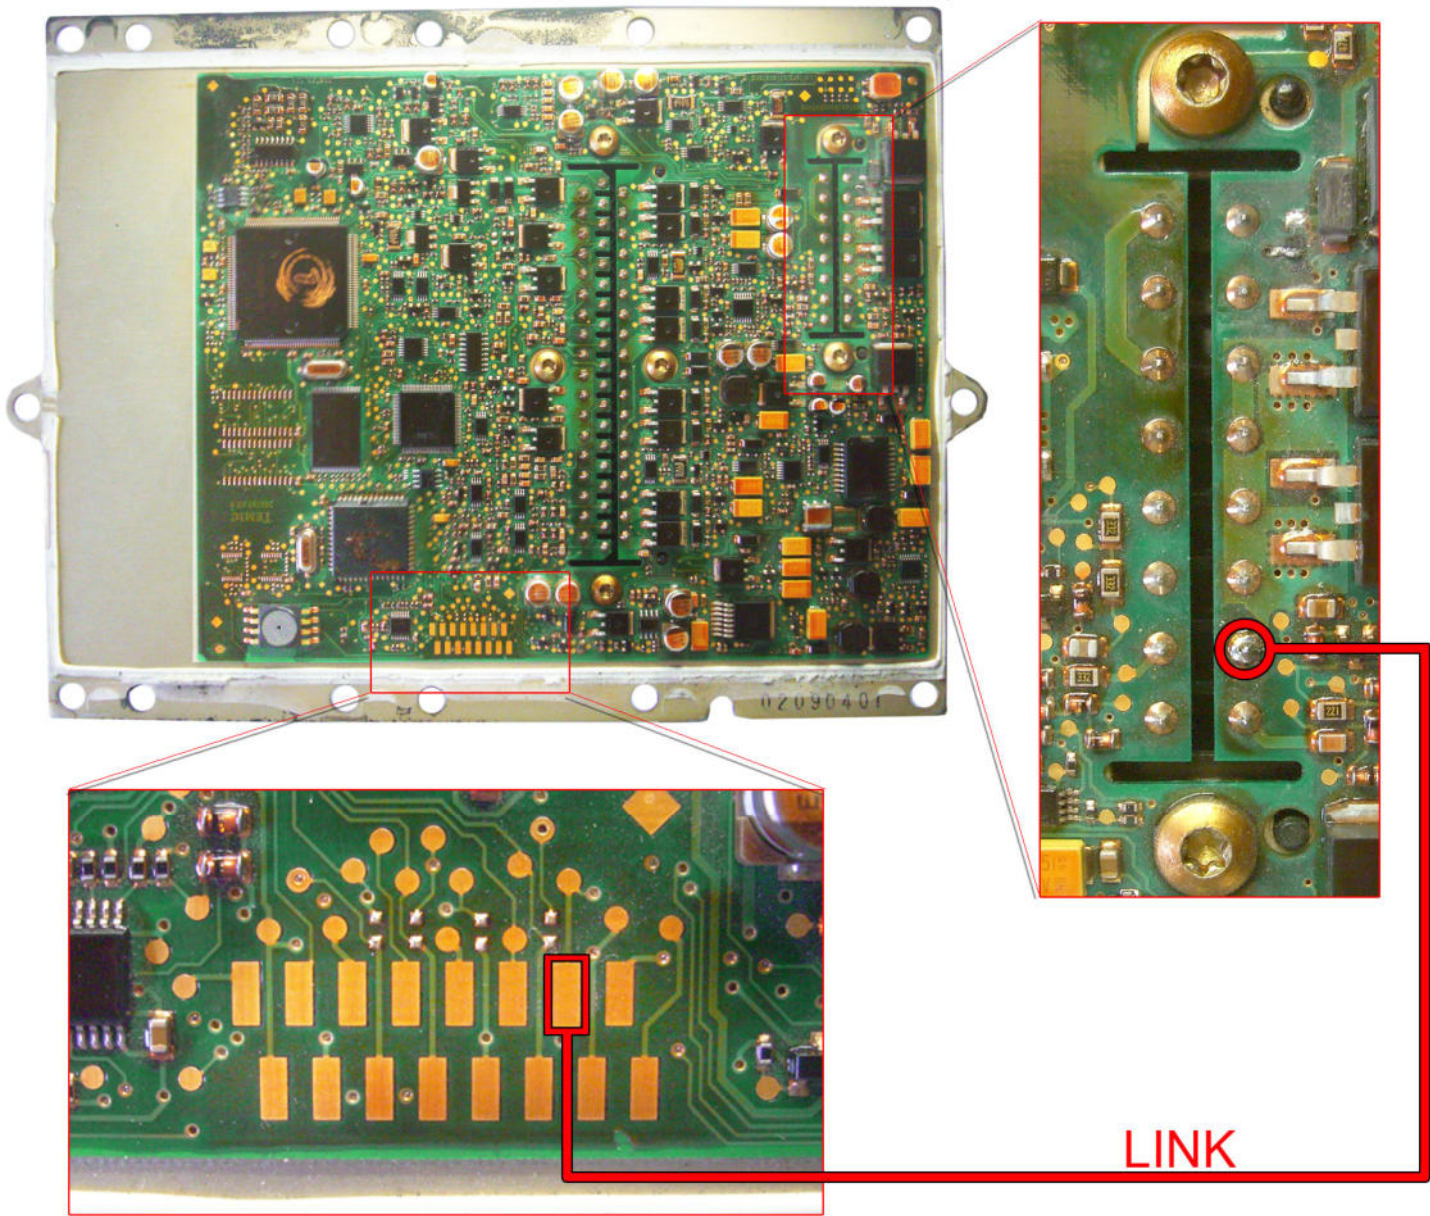


Vedere pagina seguente..

See next page..

Effettuare le seguenti connessioni:

Make the following connections:

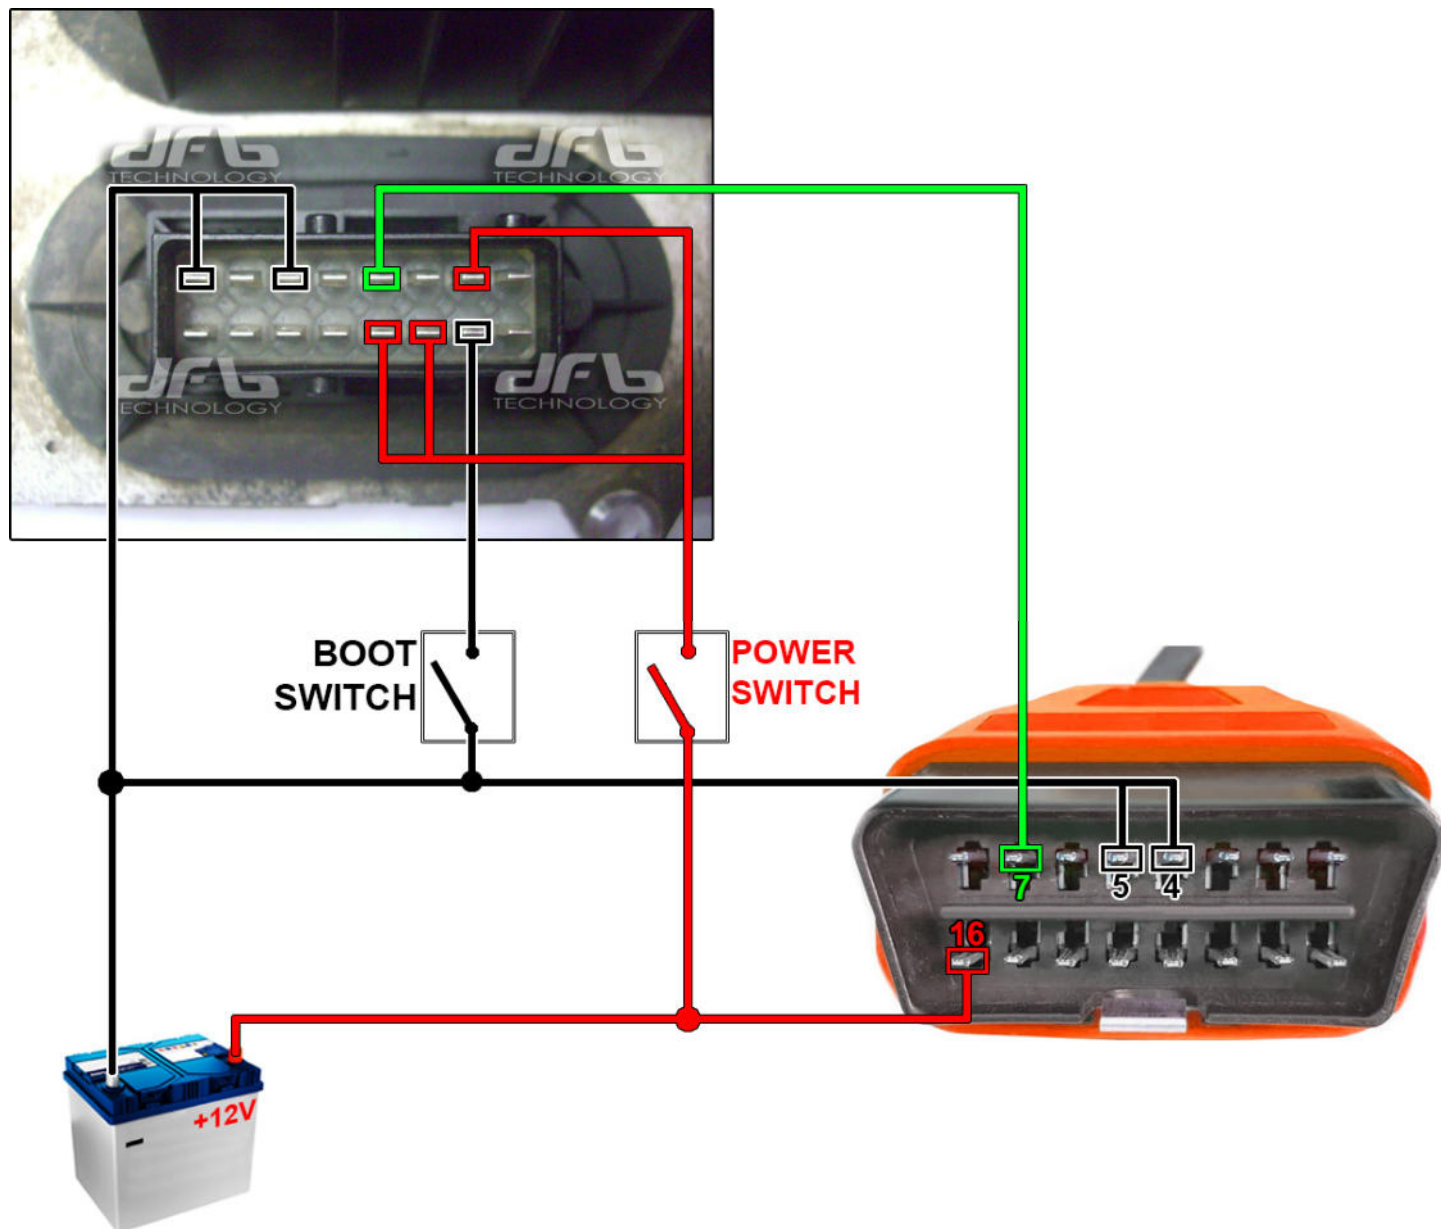

PROCEDURA:

Per leggere e scrivere utilizzare il seguente driver:

- TRUCK
- MERCEDES TRUCK > [model]
- E1/E2/E3 TEMIC BOOT 29F200 TSOP

- Alimentare a +12V
- Chiudere l'interruttore **BOOT SWITCH**.
- Chiudere l'interruttore **POWER SWITCH** (ECU ON).
- Cliccare "Dati ECU"
- Dopo aver cliccato "Dati ECU" APRIRE E CHIUDERE **RIPETUTAMENTE** l'interruttore di alimentazione POWER SWITCH più volte finché non parte la barra verde in basso.

Ora il sistema entra in comunicazione.

Ripetere questa procedura anche per la lettura e la scrittura.

PROCEDURE:

To read and write use the following driver:

- TRUCK
- MERCEDES TRUCK > [model]
- E1/E2/E3 TEMIC BOOT 29F200 TSOP

- Give power +12V
- Close the **BOOT SWITCH**.
- Close the **POWER SWITCH** (ECU ON)
- Click "Data ECU"
- After clicking "Data ECU", OPEN AND CLOSE the power switch **REPEATEDLY** until the green bar at the bottom starts.

Now the system enters in communication.

Repeat this procedure also for reading and writing.