

NEW TRASDATA

PLUGIN 816 BOSCH_EDC17C79_IROM_TC1797_GPT_FCA

CONNESSIONI con MODALITA' GPT

Per utilizzare la modalità connessione GPT è necessario utilizzare sia la ANALOG PORT sia la DIGITAL PORT.

GPT connection with loose wires

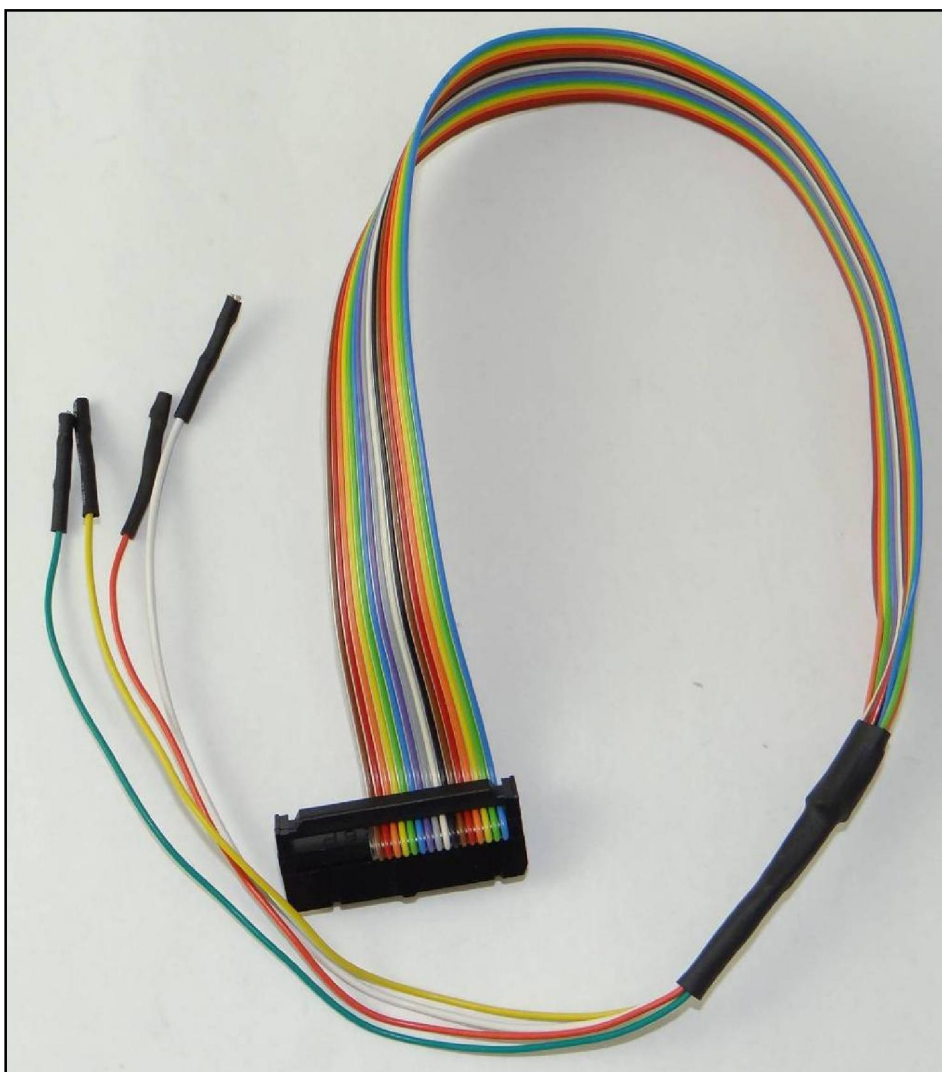
Connect the F32GN037 cable to the **ANALOG PORT**

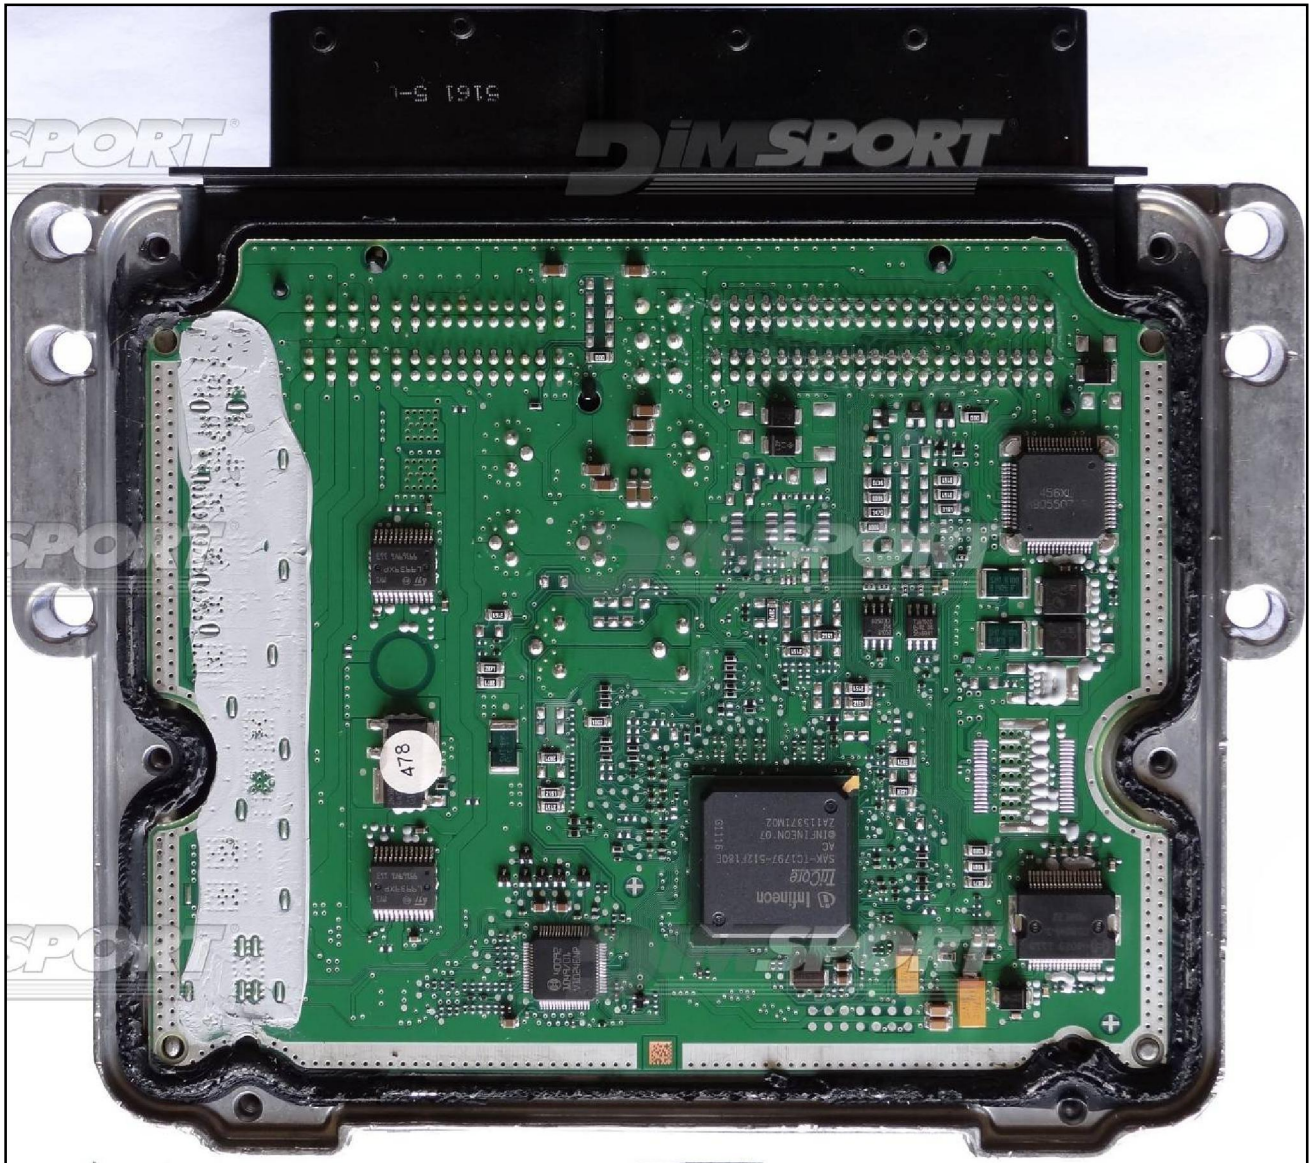
Connect the F34NTA15 to the **DIGITAL PORT**, use the YELLOW and ORANGE wires ONLY for the GPT signals as displayed in the following pictures.

GPT connection with DIMA

Connect the F32GN038 cable to the **ANALOG PORT**

Connect the F34NTA15 to the **DIGITAL PORT**, use the YELLOW and ORANGE wires ONLY for the GPT signals as displayed in the following pictures.

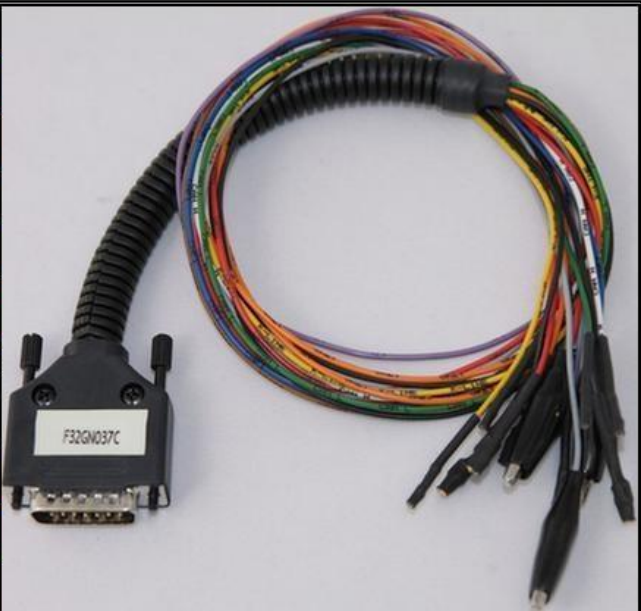
F34NTA15

EDC17C79

For the connection use the cable F32GN037C connected to the ECU.

Make sure that the POWER led (red) on NEW TRASDATA is ON.

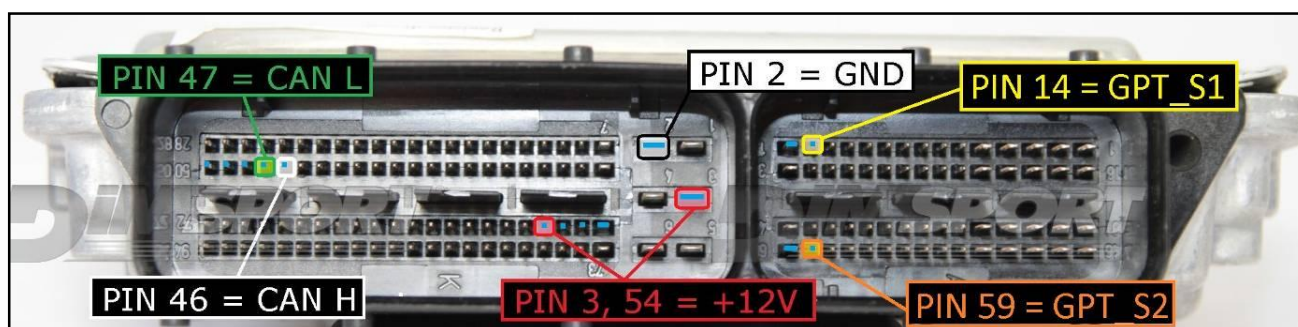
Do not use this connection with the DIMA, it will be the F34DM011 to power the ECU.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	CAN HIGH	
GRIGIO GREY	POL4 BOOT	
BLU BLUE	POL5 CNF1	
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE	
MARRONE BROWN	RESET	

GPT DIRECT CONNECTION

GPT connection is required for the first time only, after the first ECU reading it is not necessary any longer. Connect the F34NTA15 flat cable to the GPT_S1 & GPT_S2 pins.

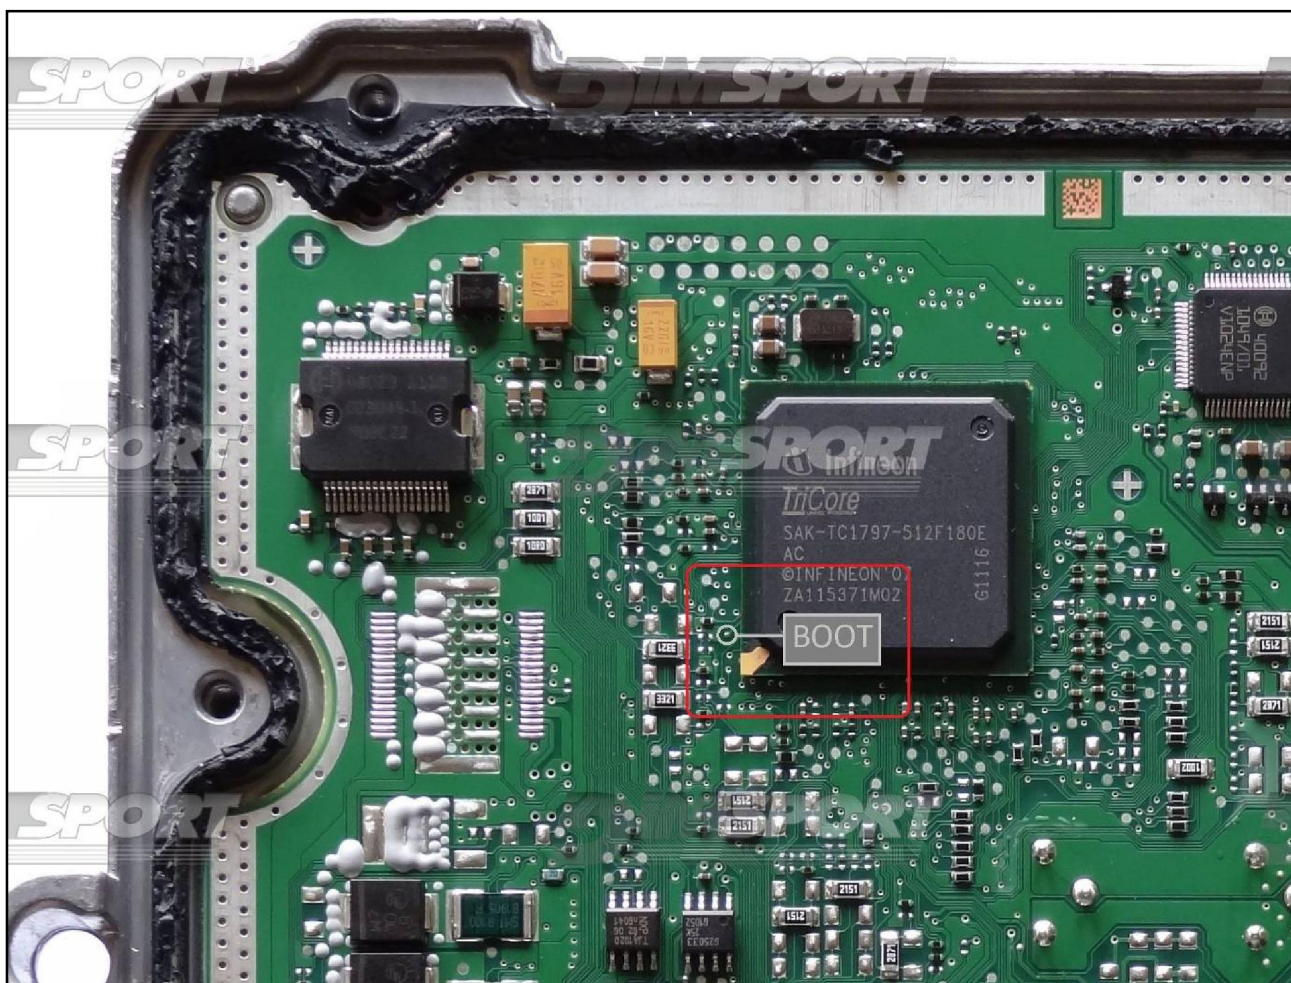
PIN / Colore PIN / Coulor	DESCRIZIONE DESCRIPTION
	GPT_S2
	GPT_S1



DIRECT BOOT CONNECTION

Connect the GREY wire of the cable F32GN037C as shown in the picture.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
GRIGIO GREY	POL4 BOOT



DIMA CONNECTION

For the DIMA connection is required the F34DM011 DIMA adapter + the F32GN038 flat cable. Connect the F32GN038 FLAT cable to the ANALOG PORT and to the F34DM011 DIMA adapter. Connect the F34NTA15 flat cable to the DIGITAL PORT.

Perform the connections as shown in the previous detail at pg.4 using for the BOOT signal the specific clamp on the F34DM011 DIMA adapter (verify that the yellow BOOT switch present on the F34DM011 is set in position ON).

Perform then the GPT connections with the F34NTA15 flat cable as shown at pg.3 .

