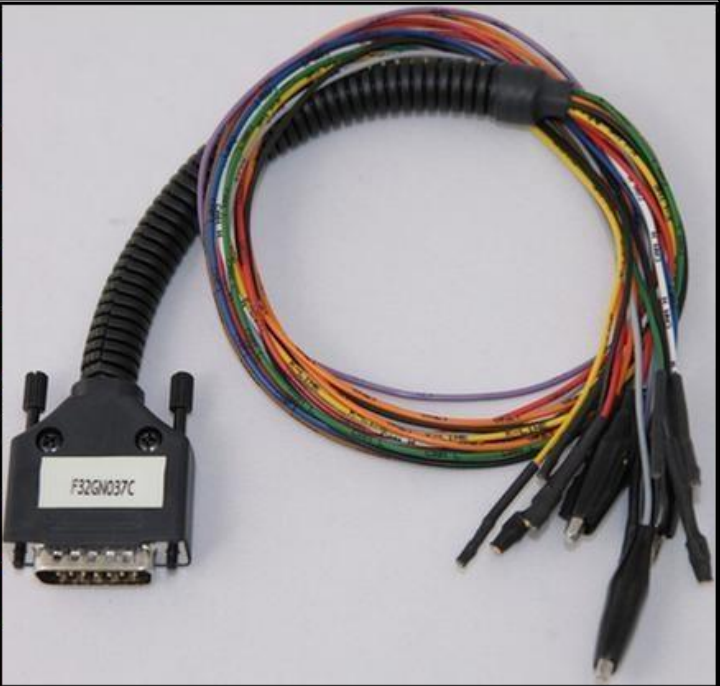



PLUGIN 602 :NEW TRASDATA

DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C.
Make sure that the POWER led (red) on NEW TRASDATA is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	CAN HIGH	
GRIGIO GREY	POL4 BOOT	
BLU BLUE	POL5 CNF1	
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE	
MARRONE BROWN	RESET	

ECU CONNECTOR

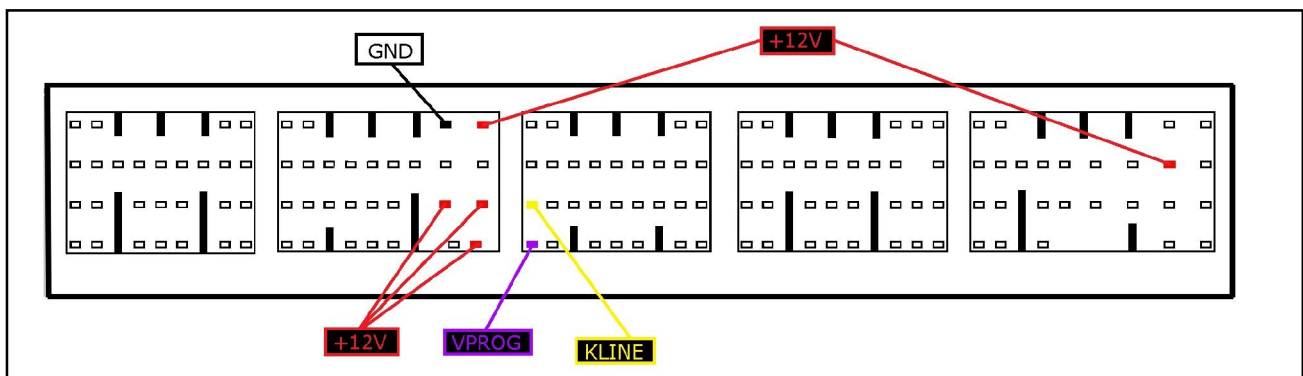

To the 5 power feeding pins you can connect both wires red and orange, they both have 12 Volt signal.

WARNING: after placing back the ECU in the vehicle it is possible that the vehicle has lost some self adaptive parameters (e.g. idle RPM). With warm engine temperature is then necessary to rev up to full scale 3 times and check that the car runs fine.