


BOSCH MED17 [1728] – Saic [Gasoline]

Collegare il cavo multifunzione nel seguente modo:

Connect the multifunction cable as follows:

RED: + 12V	20, 35
BLACK: GROUND	64
BLUE: CAN-H	01
ORANGE: CAN-L	17
WHITE	93
BROWN	96

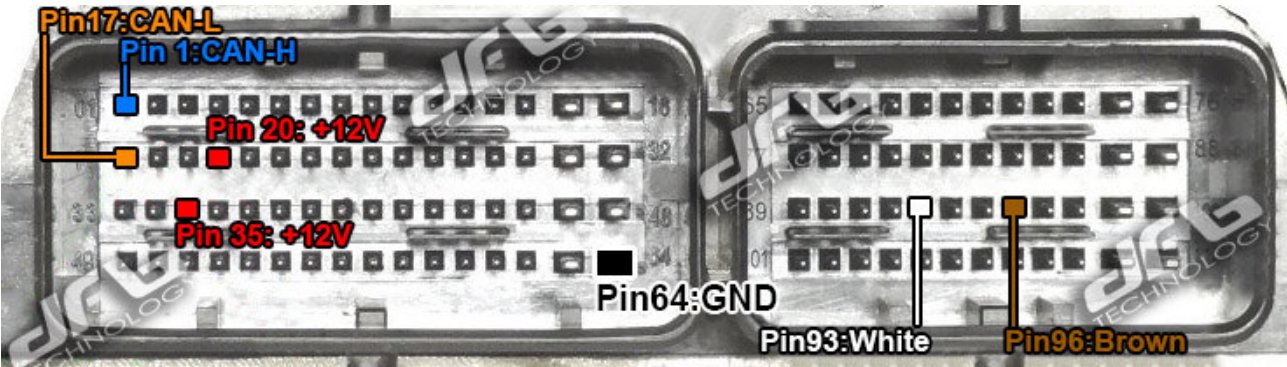

Per leggere e scrivere utilizzare il seguente driver:
→ BENCH MODE
→ Saic
→ TC1728 – Saic
→ **MED17**

To read and write use the following driver:
→ BENCH MODE
→ Saic
→ TC1728 – Saic
→ **MED17**